

CONSEW MODEL 310

PART NO.	PART NAME	PART NO.	PART NAME	PART NO.	PART NAME	PART NO.	PART NAME
1	2129001-100-C ARM BED ASSEMBLY	64	2120403-214 PRESSER SPRING, OUTER	123	9060100-006 PACKING FOR 122	156F	2120405-171 LINK FOR 179
2	2110901-151-B BELT LEG, RIGHT	65	2110901-211 PRESSER BAR ONLY	126	2110204-012 GEAR COMPLETE	156G	2120405-217 SHAFT, LEFT FOR 156A
3	2110901-119 BELT LEG, 2	66	2120403-215 PRESSER BAR BUSHING	126A	2120404-012 SET SCREW FOR 126, 126L ETC	156H	2120405-318 SHAFT, RIGHT FOR 156A
4	2110901-153-A BEL LEG, FRONT	67	9050101-215 SET SCREW FOR 66	127	2120404-241 VERTICAL SHAFT ONLY	156I	2120405-324 PUG FOR 156H
5	2110901-153-B BEL LEG, REAR	68	2120403-219 HINGED FOOT	128	2110904-242 VERTICAL SHAFT UPPER	156J	2120405-325 SOFT PLUG FOR 156A
6	2110902-319 NUT FOR 6	69	2120403-220-A HINGED FOOT HOLDER	129	2110904-243 VERTICAL SHAFT LOWER	156K	2120405-330 NUT FOR 156H
7	9540805-102 SET SCREW FOR NAME PLATE	70	2120403-238-A PRESSER BAR FOR 70	130	2120605-100-B BEL HINGED	156L	2120405-331 BEL HINGED
8	2110902-312-C THREAD GUIDE WITH THREE HOLES	71	2120403-239-B PRESSER BAR FOR 71	130A	2110905-111-A OIL PUMP COMPLETE	156M	2120405-332 OIL PUMP COMPLETE
9	9501101-259 SET SCREW FOR 9	72	2110904-239 PRESSER BAR FOR 72	130B	2110905-163 OIL HOSE NUTPLE	156N	9060100-007 OIL HOSE NUTPLE
10	2110902-313-A THREAD GUIDE, RIGHT	73	9501101-259 SET SCREW FOR 72	130C	2120205-163 OIL PUMP IMPELLER	156P	9060100-007 WASHER FOR 168
11	9540905-119 SET SCREW FOR 11, 13, ETC	74	9541104-239-A SPRING FOR 72	130D	9090300-091 WASHER FOR 130C	156Q	2120405-344 FEED REGULATOR ARM
12	2120402-315-B THREAD GUIDE, LEFT	75	2110903-216-A SPRING FOR 72	130E-1	9501200-120-A OIL RETURN CAM SHAFT	156R	2120405-345 FEED REGULATOR ARM
13	2120402-315-B THREAD GUIDE, LEFT	76	2120403-240-B PRESSER BAR LIFTER COMPLETE	130E-1	9501200-279 SET SCREW FOR 130E & 131	156S	9541217-107 SET SCREW FOR 168
14	2120401-241 GUARD FOR TAKE UP LEVER	77	2110903-216-A PRESSER BAR LIFTER	130F	2110906-112 OIL PUMP COVER	156T	9541238-107 CAP SCREW FOR 168
15	9541101-241 SET SCREW FOR TAKE UP LEVER	78	2120403-242-F HINGE SCREW FOR 76B	130G	2110906-114 OIL PUMP FILTER	156U	2110906-114 OIL PUMP FILTER
16	2120401-210-B ARM COVER PLATE COMPLETE	79	9015500-047 HINGE SCREW FOR 76B	130H	2110906-115 FRAME FOR 130G	156V	2120405-312 FEED REVERSE REGULATOR LINK
16A	2120401-211 ARM COVER PLATE	79	9015500-047 HINGE SCREW FOR 76B	130I	9540905-239 SET SCREW FOR 130H	156W	2120405-312 FEED REVERSE REGULATOR LINK
16B	2120401-221-A PUSH BUTTON	77	2120403-206-E COMPLETE, LEFT	130J	2110205-122 PISTON FOR 130I	156X	2120405-316 SHAFT (A) FOR 156B
16D	2110901-222-A SPRING FOR 16B	77A	2120403-206-E COMPLETE, LEFT	130L	2110205-122 PISTON FOR 130J	156Y	2120405-316 SHAFT (B) FOR 156B
16E	9090200-007 STOP RING FOR 16B, 76B, ETC	77B	2120403-206-B LEFT	130M	2110205-122 PISTON FOR 130K	156Z	2120405-316 FEED ROCK CONNECTING ROD
16F	9541103-223 SET SCREW FOR 16A, 16E, ETC	77C	9541210-119 CLAMP SCREW FOR 77A, 99A, ETC	131	2110906-180 COLLAR COMPLETE FOR 132	157	2120405-350 COLLAR COMPLETE FOR 132
17	2120401-215-B GASKET FOR 16	77D	9015500-235-A SET SCREW FOR 77A	131	2110906-180 COLLAR COMPLETE FOR 132	157A	2120405-350 COLLAR COMPLETE FOR 132
18	2120401-181-A GASKET FOR 18	77E	9015500-235-A SET SCREW FOR 77A	132	2110906-152 OIL FEED TUBE COMPLETE	157B	2110906-152 OIL FEED TUBE COMPLETE
19	2120401-230 FACE COVER PLATE COMPLETE	78	2110903-253 KNEE LIFTER ROD	133	2110205-152 OIL FEED TUBE COMPLETE	157C	2110906-152 OIL FEED TUBE COMPLETE
20A	2120401-224-A CLAMP FOR 20 & 45	79	9015500-047 JOINT SCREW FOR 78	133	2120405-140-A PLUG FOR BED HOLE	157D	2120405-140-A PLUG FOR BED HOLE
21	9541103-222-A SET SCREW FOR 20	80	2120403-251-A KNEE LIFTER BELL CRANK	134	2110904-211 OIL FELT FOR 136	157E	2110904-211 OIL FELT FOR 136
22	2120401-224-A SET SCREW FOR 20	81	9060100-011 RUBBER RING FOR 80	135	2120405-216-A OIL REG. LIFTING SCREW	157F	2120405-216-A OIL REG. LIFTING SCREW
24	2120404-119 PLIG FOR SCREW HOLE	82	2120403-254 BUSHING FOR 80	140	2120404-212-A OIL REG. LIFTING SCREW	157G	2120405-216-A OIL REG. LIFTING SCREW
26	9540905-241 SET SCREW FOR 68 & 222	83	9501301-276 SET SCREW FOR 82	141	2120404-216-A HOOK SHAFT FRONT BUSHING	157H	2120405-216-A HOOK SHAFT FRONT BUSHING
27	2120202-350-F CHECK SPRING	84	9541109-107 SET SCREW FOR 84	142	2120201-314-A HOOK SHAFT REAR BUSHING	157I	2120201-314-A HOOK SHAFT REAR BUSHING
27A	2120202-354 TENSION SPRING	85	9541109-107 SET SCREW FOR 84	143	2120201-314-A HOOK SHAFT REAR BUSHING	157J	2120201-314-A HOOK SHAFT REAR BUSHING
27B	2120202-355-A TENSION SPRING	86	9541109-107 SET SCREW FOR 84	144	2120201-314-A HOOK SHAFT REAR BUSHING	157K	2120201-314-A HOOK SHAFT REAR BUSHING
27C	2120202-359 TENSION SPRING	87	9015500-047 HINGE SCREW FOR 86	144	2120201-314-A HOOK SHAFT REAR BUSHING	157L	2120201-314-A HOOK SHAFT REAR BUSHING
27D	2120202-366 BATCHET FOR 27B	88	9015500-047 HINGE SCREW FOR 86	144	2120201-314-A HOOK SHAFT REAR BUSHING	157M	2120201-314-A HOOK SHAFT REAR BUSHING
27E	2120202-368 SET SCREW FOR TENSION STUD	88	2120403-411-A THREAD TENSION RELEASE	145	2120201-315-A HOOK RETURNER ASSEMBLY	157N	2120201-315-A HOOK RETURNER ASSEMBLY
29	9501506-276 SET SCREW FOR 27	90	2120403-412 ADJUST PLATE FOR TENSION	147	2120201-315-E HOOK RETURNER ASSEMBLY	157O	2120201-315-E HOOK RETURNER ASSEMBLY
29	9501506-276 SET SCREW FOR 27	91	2120203-213-A SHAFT FOR 88	148	9510304-267 E HOOK RETURNER ASSEMBLY	157P	9510304-267 E HOOK RETURNER ASSEMBLY
31	2110222-111-C NEEDLE BAR ONLY	92	2110203-415-A SET SCREW FOR 91 & 173	149	9130500-315 SPRING WASHER FOR 148	157Q	9130500-315 SPRING WASHER FOR 148
31	2110222-111-B THREAD GUIDE FOR 30	93	2120403-222 KNEE LIFTER BELL CRANK	150	2110904-301-B ROBBIN CASE COMPLETE	157R	2110904-301-B ROBBIN CASE COMPLETE
32	9540905-259 SET SCREW FOR 33	94	9015500-048 NEEDLE PLATE	151	2110904-321 OIL PAN COMPLETE	157S	2110904-321 OIL PAN COMPLETE
34	2120403-111 NEEDLE PLATE	94	9015500-048 NEEDLE PLATE	152	2110904-321 OIL PAN COMPLETE	157T	2110904-321 OIL PAN COMPLETE
35	2110901-130 SLIDE PLATE COMPLETE	95	2110903-018 HINGE SCREW FOR 93	152A	2110901-311-B OIL PAN COMPLETE	157U	2110901-311-B OIL PAN COMPLETE
35A	1110901-130 SLIDE PLATE COMPLETE	95	2110903-018 HINGE SCREW FOR 93	152B	2110901-312-A OIL PAN GASKET	157V	2110901-312-A OIL PAN GASKET
35B	9540901-119 SET SCREW FOR 35A	97	9015500-019-A HINGE SCREW FOR 95	152C	2110901-312-A OIL PAN GASKET	157W	2110901-312-A OIL PAN GASKET
36	2120402-511 NEEDLE BAR ARM	97	9015500-019-A HINGE SCREW FOR 95	152D	9541015-216 NUT FOR 152H & 152J	157X	9541015-216 NUT FOR 152H & 152J
37	2120402-114 NEEDLE BAR BUSHING	98	9410125-100 NUT FOR 97	152E	9541015-216 NUT FOR 152H & 152J	157Y	9541015-216 NUT FOR 152H & 152J
38	9015500-006 SET SCREW FOR 42, 43, ETC	99	2110903-330-E COMPLETE	152F	2110201-313-A DRAIN PLUG	157Z	2110201-313-A DRAIN PLUG
38	9015500-006 SET SCREW FOR 42, 43, ETC	99A	2110903-331-D BRACKET FOR 99B	152G	2110203-34-A KNEE LIFTER CONTROLLER	157AA	2110203-34-A KNEE LIFTER CONTROLLER
40	2120405-432 NEEDLE FEED HOCK LINK	99B	2110903-332-A BRACKET FOR 99B	152H	9501503-276 ADJUST SCREW FOR 152G	157AB	9501503-276 ADJUST SCREW FOR 152G
41	2120405-432 NEEDLE FEED HOCK LINK	99C	2110903-334 HINGE SHAFT FOR 99B	152I	9410151-219 NUT FOR 152H & 152J	157AC	9410151-219 NUT FOR 152H & 152J
42	2120405-432 NEEDLE FEED HOCK LINK	99D	2110903-334 HINGE SHAFT FOR 99B	152J	9501510-276 ADJUST SCREW FOR 152K	157AD	9501510-276 ADJUST SCREW FOR 152K
43	2120405-431 NEEDLE FEED HOCK ARM	99E	9502030-048 JOINT RING FOR 99E	152K	2110203-302-B KNEE LIFTER LOWER LEVER	157AE	2110203-302-B KNEE LIFTER LOWER LEVER
44	2120405-431 NEEDLE FEED HOCK ARM	99F	9502030-048 JOINT RING FOR 99E	152L	2110203-302-B KNEE LIFTER LOWER LEVER	157AF	2110203-302-B KNEE LIFTER LOWER LEVER
45	9541101-456 HINGE SHAFT FOR 47	100	2120405-141 OIL HOCK CLIP	152M	9501503-276 ADJUST SCREW FOR 152K	157AG	9501503-276 ADJUST SCREW FOR 152K
46	1220405-513 HINGE SHAFT FOR 96	100	2120405-141 OIL HOCK CLIP	152N	2110201-314-A HOKE RETURNER ASSEMBLY	157AH	2110201-314-A HOKE RETURNER ASSEMBLY
47	1220405-513 HINGE SHAFT FOR 96	100	2120405-141 OIL HOCK CLIP	152O	2110203-343-C WASHER FOR 152C	157AI	2110203-343-C WASHER FOR 152C
48	9060100-013 PLUG FOR SCREW HOLE	101	2120405-141 OIL HOCK CLIP	152P	2110203-343-D KNEE LIFTER ARM	157AJ	2110203-343-D KNEE LIFTER ARM
49	2110201-254 PLUG FOR SCREW HOLE	102	2120405-141 OIL HOCK CLIP	152Q	2110203-343-E KNEE LIFTER ARM	157AK	2110203-343-E KNEE LIFTER ARM
49	2110201-254 PLUG FOR SCREW HOLE	103	2120405-141 OIL HOCK CLIP	152R	2110203-343-E KNEE LIFTER ARM	157AL	2110203-343-E KNEE LIFTER ARM
50A	9531004-340 SET SCREW FOR 47	104	9501500-015-B HOSE RETAINER	152S	2110203-343-E KNEE LIFTER ARM	157AM	2110203-343-E KNEE LIFTER ARM
50A	9531004-340 SET SCREW FOR 47	105	9501500-015-B HOSE RETAINER	152T	2110203-343-E KNEE LIFTER ARM	157AN	2110203-343-E KNEE LIFTER ARM
51	2120402-512 SET SCREW FOR 51	106	9400801-106 NUT FOR 104	152U	2110203-343-E KNEE LIFTER ARM	157AO	2110203-343-E KNEE LIFTER ARM
52	9531102-219 OIL WICK RETAINER FOR 51	107	2110901-213 GASKET FOR 106	152V	2110903-304-D KNEE LIFTER PLUNGER	157AP	2110903-304-D KNEE LIFTER PLUNGER
53	2120405-393 SET SCREW FOR 53	108	2110901-217 OIL GAUGE WINDOW FRAME	152W	2120405-111-A FEED REGULATOR COMPLETE	157AQ	2120405-111-A FEED REGULATOR COMPLETE
54	9531102-219 OIL WICK RETAINER FOR 51	109	9560904-307 TOP SHAFT ONLY	152X	2120405-111-A FEED REGULATOR COMPLETE	157AR	2120405-111-A FEED REGULATOR COMPLETE
55	2110232-130 TAKE UP LEVER CRANK COMPLETE	110	2120404-118 TOP SHAFT OIL STOPPER, REAR	152Y	2120405-114 FEED CAM RATCHET	157AS	2120405-114 FEED CAM RATCHET
55A	9013400-013 SET SCREW FOR 55	111	2120404-118 TOP SHAFT OIL STOPPER, REAR	152Z	2120405-139 COLLAR FOR 144G	157AT	2120405-139 COLLAR FOR 144G
55B	9501801-276 CLAMP SCREW FOR 55	112	2110904-118 TOP SHAFT OIL STOPPER, REAR	152AA	2120405-139 COLLAR FOR 144G	157AU	2120405-139 COLLAR FOR 144G
55C	9501801-276 CLAMP SCREW FOR 55	113	2120405-119 OIL FELT FOR 111	152AB	2120405-139 COLLAR FOR 144G	157AV	2120405-139 COLLAR FOR 144G
56	2120402-02-C TAKE UP LEVER COMPLETE	114	2120405-119 OIL FELT FOR 111	152AC	2120405-139 COLLAR FOR 144G	157AW	2120405-139 COLLAR FOR 144G
57	2120402-02-C TAKE UP LEVER COMPLETE	115	2120405-119 OIL FELT FOR 111	152AD	9501501-226 FEED LIFTING CAM	157AX	9501501-226 FEED LIFTING CAM
57	2120402-02-C TAKE UP LEVER COMPLETE	116	9541801-116 PACKING FOR 116	152AE	2120405-154 FEED LIFTING CAM	157AY	2120405-154 FEED LIFTING CAM
58A	9509002-214-A HINGE STUD FOR 56	117	2120404-112-B TOP SHAFT FRONT BUSHING	152AF	2120405-154 FEED LIFTING CAM	157AZ	2120405-154 FEED LIFTING CAM
58B	9509002-214-A HINGE STUD FOR 56	118	2120404-112-B TOP SHAFT FRONT BUSHING	152AG	2120405-154 FEED LIFTING CAM	157BA	2120405-154 FEED LIFTING CAM
59	2120405-215-A WICKER FOR OIL WICK	119	2120404-113-B TOP SHAFT CENTER BUSHING	152AH	2120405-154 FEED LIFTING CAM	157BB	2120405-154 FEED LIFTING CAM
60	9501506-276-A SET SCREW FOR 58, 174, ETC	120	2120404-113-B TOP SHAFT CENTER BUSHING	152AI	2120405-154 FEED LIFTING CAM	157BC	2120405-154 FEED LIFTING CAM
61	2120203-271-A PRESSURE REGULATOR SCREW	121	2120404-113-B TOP SHAFT CENTER BUSHING	152AJ	2120405-154 FEED LIFTING CAM	157BD	2120405-154 FEED LIFTING CAM
62	2120203-272-A PRESSURE REGULATOR ROD	122	2220204-151-A HAND WHEEL	152AK	2120405-154 FEED LIFTING CAM	157BE	2120405-154 FEED LIFTING CAM
63	2120403-213 PRESSER SPRING, INNER	124	2110904-122 CAP SCREW FOR 122	152AL	2120405-154 FEED LIFTING CAM	157BF	2120405-154 FEED LIFTING CAM

Use only exact parts number for ordering. Be sure indicate all digits and letters as indicated in listing. Do not use position number from illustration for ordering.