

Pfaff 5489 H  
Subclass

# PFAFF

## 5489-H

Unterklassen-Ausstattung

Subclass parts

Composition des sous-classes

Composición de las subclases

# Unterklassen-Ausstattung

# Subclass organization

## Equipement des sous-classes

## Dotación de las subclases

Unterklasse Subclass Sous-classe Subclase	Ausführung Model Version Tipo de máquina	Nadelabstand in mm Needle gauge in mm Écartement des aiguilles en mm Distancia entre agujas en mm	Nadelstange Needle bar Barra de aguja	Stoffschieber links Feed dog, left Griffe gauche Elemento izquierdo del transportador inferior	Stoffschieber rechts Feed dog, right Griffe droite Elemento derecho del transportador inferior	Stichplatte Needle plate Plaque à aiguille Placa de aguja
--	---	--	---	--	--	--

-814/01-704/02-739/01-748/26 2-Nadel-Ausführung · 2-needle version

-58/05-960/11; /14	BN 46 CN 46	6,4; 7,2	91-178 073-93 <sup>10/2</sup>	91-059 726-04 <sup>10/2</sup>	91-059 199-04	91-158 295-93 <sup>10/2</sup>
--------------------	----------------	----------	-------------------------------	-------------------------------	---------------	-------------------------------

-814/01-704/02-739/01-748/26 3-Nadel-Ausführung · 3-needle version

-58/05-960/11; /14	BN 46 CN 46	3,2x3,2; 3,6x3,6	91-178 074-93 <sup>10/2</sup>	91-059 699-04 <sup>10/2</sup>	91-059 199-04	91-158 119-93 <sup>10/2</sup>
--------------------	----------------	------------------	-------------------------------	-------------------------------	---------------	-------------------------------

 
<sup>4</sup> = Ausführung angeben  
= Indicate model  
= Préciser la version  
= Indiquez el tipo de máquina

<sup>5</sup> = Nähmuster einsenden  
= Submit sewing sample  
= Joindre échantillons de couture  
= Envíese muestra de costura

<sup>10</sup> = Nadelabstand  
= Needle gauge  
= Écartement des aiguilles  
= Distancia entre agujas




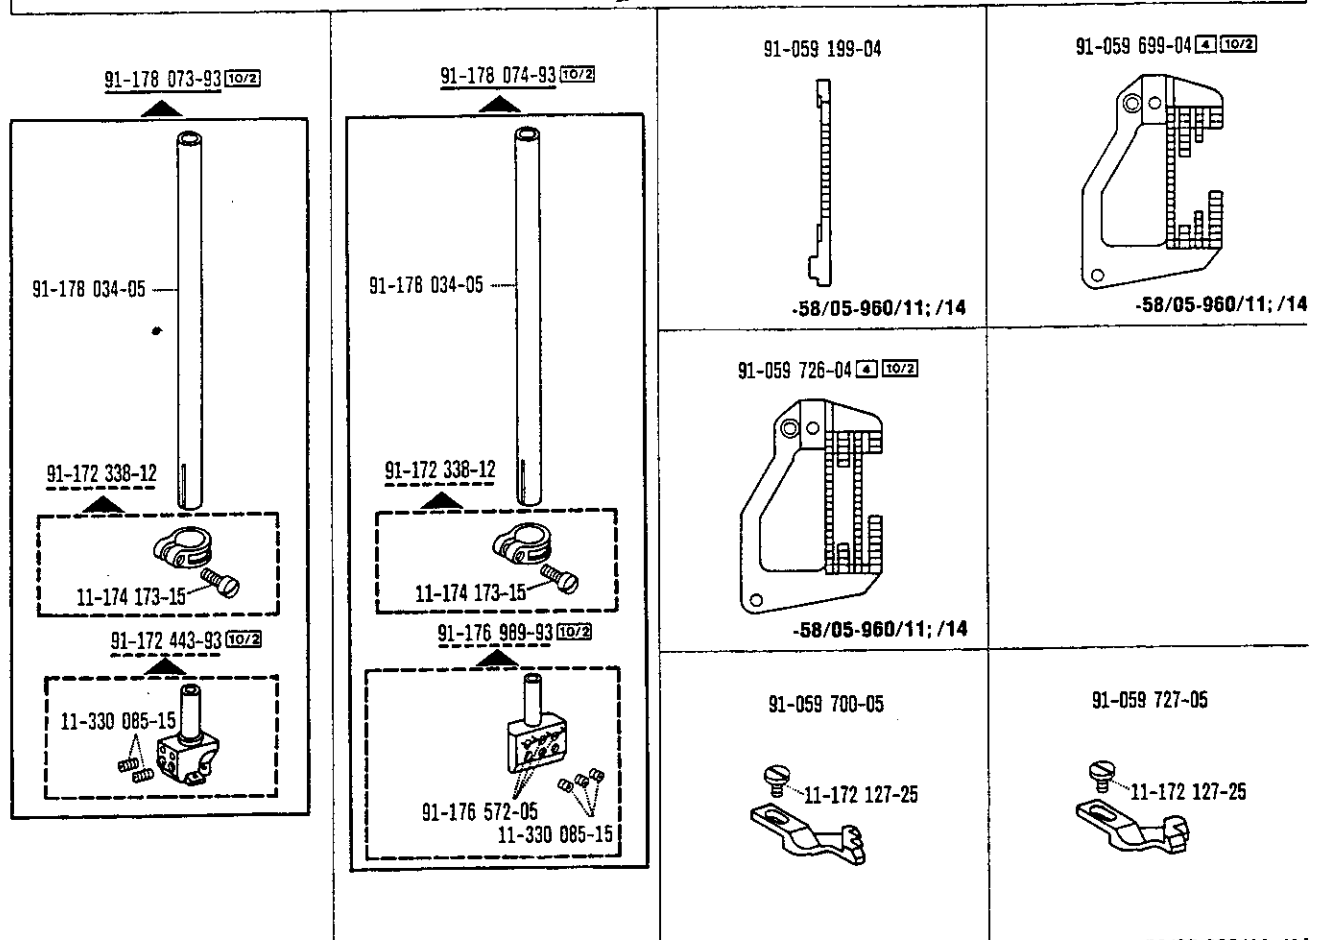




<sup>10/2</sup> = Nadelabstand bei Bestellung angeben  
= State needle gauge on order  
= Indiquer écartement des aiguilles à la commande  
= Indiquez en los pedidos la distancia entre agujas





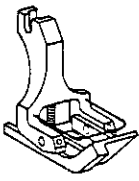
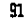

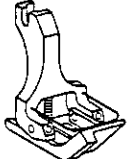
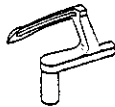




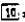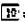
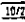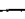
### Unterklassen-Übersicht/ Table of subclasses/ Table des sous-classes/ Tabla de subclases

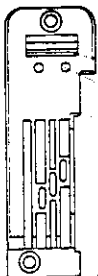

 
**Equipement des sous-classes  
Unterklassen-Ausstattung**

**Dotación de las subclases  
Subclass organization**

 
Unterklasse Subclass Sous-classe Subclase	Ausführung Model Type Tipo de máquina	Maschine Presser/foot Pied/presser Pie/prensateles	Apparat Attachment Appareil Aparato	Kettenschnitzgreifer, vorn Looper, front Boucleur avant Garfio delantero para punto cadaveta	Kettenschnitzgreifer, mitte Looper, middle Boucleur centrale Garfio central para punto cadaveta	Kettenschnitzgreifer, hinten Looper, rear Boucleur arrière Garfio posterior para punto cadaveta	Medenschutz Needle guard Garde-aiguille Guardaaguja	Abdeckplatte Cover plate Plaque de recouvrement Placa cubierta
-814/01-704/02-739/01-748/26		Machine à 2 aiguilles · Máquina de 2 agujas						
-58/05-960/11;/14	BN 46 CN 46	91-157 499-93  	91-056 977-93	91-169 867-05  = 6,4 mm 91-169 868-05  = 7,2 mm		91-169 877-05  = 6,4 mm 91-169 878-05  = 7,2 mm	91-059 727-05	91-178 051-91
-814/01-704/02-739/01-748/26		Machine à 3 aiguilles · Máquina de 3 agujas						
-58/05-960/11;/14	BN 46 CN 46	91-157 143-93  	91-056 977-93	91-176 980-05	91-176 981-05	91-176 982-05	91-059 700-05	91-178 051-91

<p>91-158 119-93</p>  <p>91-158 122-01 11-210 076-15 (2 x) 91-158 120-04</p> <p>-58/05-960/11;/14</p>	<p>91-158 295-93</p>  <p>91-158 122-01 11-210 076-15 (2 x) 91-158 295-04</p> <p>-58/05-960/11;/14</p>	<p>91-157 143-93  </p>  <p>-58/05-960/11;/14</p>	<p>91-157 499-93  </p>  <p>-58/05-960/11;/14</p>
<p>91-169 867-05</p>  <p>-58/05-960/11;/14</p>	<p>91-169 868-05</p>  <p>-58/05-960/11;/14</p>	<p>91-169 877-05</p>  <p>-58/05-960/11;/14</p>	<p>91-169 878-05</p>  <p>-58/05-960/11;/14</p>
<p>91-176 980-05</p>  <p>-58/05-960/11;/14</p>	<p>91-176 981-05</p>  <p>-58/05-960/11;/14</p>	<p>91-176 982-05</p>  <p>-58/05-960/11;/14</p>	

Unterklassen-Ubersicht/ Table of subclasses/ Table des sous-classes/ Tabla de subclases

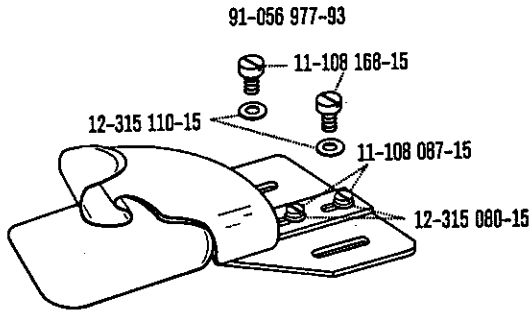

-58/05-960/11;/14

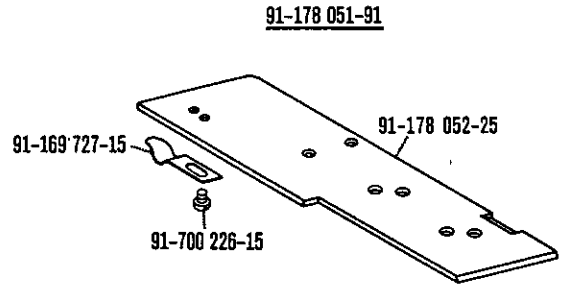

-58/05-960/11;/14