

Multi Needle Machines with Puller for Inserting(attach)Elastic tape.

Numbering on Model of Multi Needle Machines

V C 3 8 4 5 P - 3 4 8 - W 0 1 A / U T - A 6 0 / A S 3

① ② ③ ④ ⑤ ⑥ ⑦ ⑧ ⑨ ⑩

① Symbol of Series

② Class No.

③ Multi Needle

④ Sub Model by use

40 For hemming on sweat pants etc, on elastic preattached by overlock machines

45 For inserting endless elastic tape to men's briefs, sweat pants etc. (tape width: up to 30mm)

⑤ Rear Puller

P indication=with Rear Puller

No indication=without Rear Puller

⑥ Needle distance

348 = 34.8mm 188 = 18.8mm 308 = 30.8mm

254 = 25.4mm 172 = 17.2mm 340 = 34.0mm

303 = 30.3mm 280 = 28.0mm

⑦ Type of Needle Row

W... X... Y...

⑧ Pitch of Each Needle

⑨ Seam Style



Note B=Elastic is preattached by overlock machine in the preceding process.

⑩ Attachments

*UT-A50: Air-operated automatic under thread trimmer (with air-wiper)

*UT-A60: Same as above, but with AR10 Device

*AR10: Air-operated roller tension controller

*AS3: Air-operated automatic folder slider

●Fabric Chip Collector (YV-2000) should be used for above machine.


Specifications									
Models									
VC3845P-348-W01A /UT-A60/AS3	5 (TV×5)	9	34.8 (4.8-10-10)	1.0~4.0	knob or lever	8 Max.	33	4,000	60 ℓ / min
VC3845P-188-Y03C /UT-A50/AS3	4 (TV×5)	6	18.8 (4.8-10-4.0)	1.0~4.0	knob or lever	8 Max.	33	4,000	60 ℓ / min
VC2840P-254-X02B /UT-A50	4 (TV×5)	8	25.4 (8.5-8.5-8.5)	1.0~4.0	knob or lever	8 Max.	33	4,000	60 ℓ / min
VC2845P-254-X02D /UT-A50/AS3	4 (TV×5)	8	25.4 (8.5-8.5-8.5)	1.0~4.0	knob or lever	8 Max.	33	4,000	60 ℓ / min

● Air Wiper

The moment UT-A50 works, air blows off thread tails away for the next sewing.

● Left Hand Knife Mechanism

Two-folded material edges can be cut and sewn simultaneously. Upper Knife stroke=6.0mm~10.0mm (adjustable by lever)

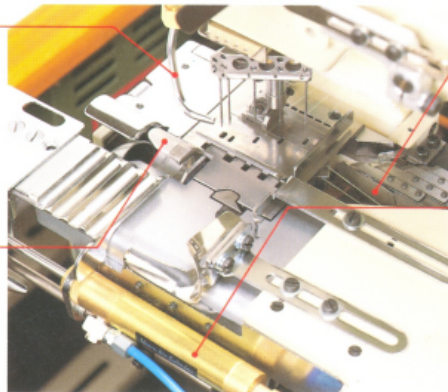

● UT-A50

[Air Operated Automatic Thread Trimmer]

It cuts off all the thread by depressing the pedal.

● UT-A60

Same as above, but with AR10 Device.

● AS3

[Air Operated Folder Slider]

By a soft touch of knee switch, it slides and then open and close automatically. It makes elastic setting easier.