

Form 18511
July, 1931
Printed in U. S. A.

LIST
OF
PARTS



MACHINES
Nos. 24-70 and 24-71

** A TRADE MARK OF
THE SINGER MANUFACTURING COMPANY

INSTRUCTIONS FOR OILING

To ensure easy running and prevent unnecessary wear of the parts which are in movable contact, the machine requires oiling and when in continuous use, "TYPE B" or "TYPE D" OIL, sold only by Singer Sewing Machine Company, should be applied at least twice each day to all oil holes marked "OIL", as instructed in Form 18479
"TYPE D" OIL is stainless.


INDEX

	PAGE
ACCESSORIES.....	18
FOOT LIFTER PARTS.....	19
HAND ATTACHMENT PARTS	17
KNEE LIFTER PARTS.....	19
MACHINE No. 24-70	7
" " 24-71	12
NUMERICAL LIST OF PARTS.....	23
NEEDLE BAR STOP DEVICE PARTS.....	18
TAPE HOLDER.....	20
THREAD UNWINDER.....	20

COPYRIGHT, U. S. A., 1922, 1930 and 1931
BY THE SINGER MANUFACTURING CO.
ALL RIGHTS RESERVED FOR ALL COUNTRIES

INSTRUCTIONS FOR ORDERING

LIST OF PARTS COMPLETE FOR

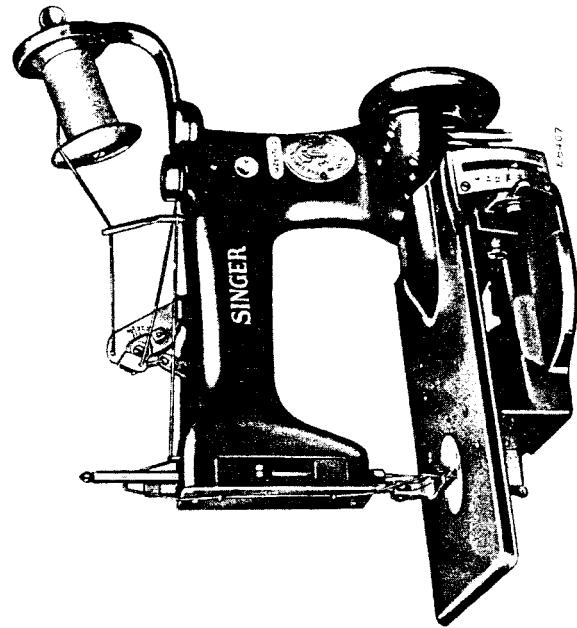

In ordering from this list, use ONLY the part NUMBER in the FIRST column.

The number stamped on a Sewing Machine part is in every case the number of the single part only.

Every combination of parts sent out as such has its specific number, which, although not stamped on the parts, must be used when ordering the combination.

Each number always indicates the SAME PART in whatever list it appears, or for whatever machine.

The letters after some of the numbers indicate the style of finish only, as follows:

A—Hardened, Polished, Nickel Plated and Buffed

B—Polished, Nickel Plated and Buffed

C—Hardened Only

D—Polished Only

E—Soft, Not Polished

F—Hardened and Polished

G—Blued

H—Nickel Plated Only

I—Hardened and Nickel Plated

J—Brass Plated

K—Oxidized

L—Japanned, Dull

M—Japanned, Bright

N—Merlized

O—Copper Plated

P—A.—Hardened, Polished, Copper and Nickel Plated

Q— and Buffed

R—Copper and Nickel Plated and Polished

S—J.—Copper and Nickel Plated Only

T—M.—Hardened, Copper and Nickel Plated

U—Copper Plated and Oxidized

V—Copper and Brass Plated

W—Zinc Plated

X—Silver Plated

Y—Polished and Nickel Plated

Z—Black Nickel Plated Only

A.—Chromium Plated

B.—Polished, Nickel Plated

C.—Buffed and Chromium Plated

Z.—Nickel and Chromium Plated

These letters MUST BE USED when they appear in the list; and AFTER the number as in the list.

In this series:

1 to 1500 and 50001 to 51500 are Screw Numbers
1501 to 1800 and 51501 to 51800 are Nut Numbers
1801 to 2000 and 51801 to 52000 are Roller Numbers
2001 to 50000 and 52001 and upward are numbers of Machine Parts

For stitching in labels. Has automatic tension and graduated thread measuring device. The graduations are made to agree with those on the feed regulator index plate. By setting the pointers on the measuring device and the feed regulator index plate on the same figure, the exact amount of thread required for each stitch will be pulled off. A knife is attached to the looper and at the completion of the operation, the turning of the balance wheel in the reverse direction cuts the thread close to the material. SPEED 2500.

NO.	PLATE	NAME
*34357	—	Arm, upper and lower (solid) with 130D and 22348.....
34589	6861	Arm Rock Shaft.....
32034	6837	" " Crank (back) with 1259C and 1439C.....

The figures in the second column refer only to the plates illustrating the parts, and are NOT TO BE USED in ordering. Parts marked with an asterisk (*) are furnished only when repairs are made at factory.

When ordering parts which differ as to Gauge (the distance between seams) the Gauge, as well as the Number must be given on order.


NO.	PLATE	NAME	NO.	PLATE	NAME
1439C	6957	Arm Rock Shaft Crank (back) Position Screw.....	34097	42225	Feed Regulator Indicator.....
1259C	6857	Arm Rock Shaft Crank (back) Set Screw.....	34211	42225	" " Hinge Pin.....
34116	6857	" " " (front) with two 1259c.....	34098	42225	" " " Plate.....
1259c	6857	Arm Rock Shaft Crank (front) Set Screw.....	335D	42225	" " " Locking Screw.....
34186	6861	Rotary Shaft with 1019c.....	1083C	42225	" " " Washer.....
199D	6859	" " " Screw.....	34099	42225	" " Rock Shaft.....
32026	6860	Balance Wheel, 2 in. pulley.....	34100	42225	Feed Rock Shaft complete, Nos. 34100 and 34102.....
34086	42222	Cloth Plate with three 1602E.....	22348	6862	Feed Rock Shaft Bracket.....
1602E	6858	" " Bushing.....	130D	6859	" " " Screw.....
1104F	6859	" " " Screw (large).	34102	42225	" " " Crank with 157H.....
219F	6859	" " " (small).	157H	42225	" " " Clamping Screw.....
34433	6861	Connecting Rod with 34134 and two 171E.....	307C	42225	" " " Screw Center.....
*34434	—	" " " Cap.....	56814	—	" " " " 307C with 1513J.....
171E	6859	" " " Screw.....	1513J	4225	Feed Rock Shaft Screw Center Nut.....
1139C	6859	" " " Hinge Screw.....	35131	6860	Guide.....
1520J	6858	" " " Nut.....	286D	6859	" " " Thumb Screw.....
34311	6860	Face Plate with two 2827.....	34600	6855	Looper with 3460L.....
337D	6859	" " " Screw.....	22349	4229	" " " Gate.....
2827	6858	" " " Thread Guard with 8505.....	1105E	4229	" " " Hinge Screw.....
8505	6858	" " " Rivet.....	22350	4229	" " " Spring.....
34088	42224	Feed Bar with 207C.....	1019C	4229	" " " Set Screw.....
22339	42224	" " " Hinge Pin.....	*34601	—	" " " Thread Cutting Knife.....
207C	42224	" " " Set Screw.....	34418	6855	" " " Washer.....
9578	6855	Dog, 15 teeth (16 teeth to the inch).....	34134	4237	Needle Bar with 22456.....
190D	6859	Feed Dog Screw.....	34170	4229	" " " Connecting Link with two 1313E.....
34187	6858	Eccentric with two 1259C.....	1313E	4229	Needle Bar Connecting Link Adjusting Screw.....
34090	42224	" " Collar with 452C.....	9570	4229	Needle Bar Connecting Stud with 207E.....
452C	42224	" " Set Screw.....	207E	4224	" " " Clamping Screw.....
1259C	6857	" " Set Screw.....	1629C	4229	Needle Clamping Nut.....
34091	42224	" " Sleeve.....	34103	4229	Presser Bar.....
34092	42224	Forked Connection.....	34104	4229	" " " Guide Bracket with 223E.....
378C	42224	" " Hinge Screw.....	223E	4229	" " " " Ajusting
1520J	6858	" " " Nut.....	50293E	6859	Presser Bar Lifter Hinge Screw.....
1832	42224	" " Roller with 1083C.....	1521J	6858	" " " Pin.....
1083C	42224	Forked Connection Roller Screw Stud.....	9534	4229	" " " Set Screw.....
34189	6858	Feed Lifting Eccentric with two 1259C.....	22405	4229	" " " Hinge Screw.....
34093	4224	" " Connection.....	34105	4229	Presser Bar Guide Bracket Guide.....
1259C	6857	" " Set Screw.....	457C	4229	" " " " Set Screw.....
34094	42225	Regulator.....	999F	4229	" " " " Set Screw.....
34095	42225	" " Crank with 230F and 34096.....	38540	4229	" " " Lifter.....
34096	42225	" " " Pin.....			
230F	4225	" " " Set Screw.....			
1215E	4225	Hinge Screw.....			

NO.	PLATE	NAME	NO.	PLATE	NAME
34602	0855	Presser Foot with 31603 and 50470L.....	1125b	6859	Thread Nipper Body Set Screw.....
334603	6855	" " Spring Guide.....	34430	—	" " Cap.....
50470J	6855	" " " " Screw.....	*34431	—	" " Stud.....
185m	6859	" " " " Screw.....	34432	6856	" " " " 34431 with 34430
1121J	4229	Pressure Regulating Thumb Screw.....	22440	6856	" " " " Washer.....
334599	6860	Pulley and Thread Nipper Rod Eccentric, 2 $\frac{3}{8}$ in. diam.	34213	6856	" " " " Disc (grooved).....
1167E	4224	Pulley and Thread Nipper Rod Eccentric Screw.....	22443	6856	" " " " Locking Washer.....
331137	6862	Spool Bracket with 1099c.....	34520	6856	" " " " Cap (leather).....
2049	6858	" " " " Dowel Pin.....	22446	6856	Thread Nipper Ring.....
1008D	6859	" " " " Screw.....	34560	6856	" " " " Position Pin.....
19066	4222	" " Spindle.....	22449	6860	" " " " Rod.....
1009C	6859	" " Set Screw.....	34580	—	" " " " 22449 with 1754E and 34506.....
19067	4222	" " Thread Guiding Disc.....	34455	6856	Thread Nipper Spring.....
691A	6859	" " " " Screw.....	34561	6856	" " " " Washer (micarta).
34169	4237	Thread Controller Post with 22429.....	19075	4237	" " Pull-off Lever with 1933.....
4606C	4237	" " " " Set Screw.....	19076	4237	" " " " Cam with two 460C
22429	4237	" " " " Spring.....	460C	4237	" " " " Set Screw.....
34171	4237	" " Eyelet (double).....	701D	6859	" " " " Hinge Screw.....
34601	6856	" " Indicator and Thread Guide.....	1933	4237	" " " " Roller and Stud.....
34606	—	" " " " " 34604 with 418P, 1562J, 23258, 34605, 43808, 50222D and two each 1735H and 29939.....	29939	6856	" " Retaining Disc.....
30222D	6859	Thread Indicator and Thread Guide Screw 1735H 6858	1562J	6858	" " Regulating Thumb Nut Screw Stud.....
190w	6859	" " " " " Nut.....	418D	6858	" " " " " Spring.....
23258	6856	Thread Indicator and Thread Guide Screw Washer.....	1735H	6858	" " " " " Take-up.....
34605	6856	Thread Indicator Plate.....	22456	4237	" " " " " Guide (top of arm).....
190w	6859	" " " " " Screw.....	22458	4237	" " " " " Screw.....
34505	6856	" " Nipper Adjusting Stud.....	9606	6855	" " " " " Throat Plate for 9578.....
34506	—	" " " " " 34505 with 22434 to 22436.....	244J	6855	" " " " " Screw.....
1170H	6858	Thread Nipper Adjusting Stud Hole Plug Screw.....			
1754E	6858	Thread Nipper Adjusting Stud Lock Nut.			
22434	6856	" " " " " Washer (leather) lower.....			
22435	6856	Thread Nipper Adjusting Stud Washer (leather) upper.....			
22436	6856	Thread Nipper Adjusting Stud Washer (steel).....			
34212	6856	Thread Nipper Body with two 34560.....			
34292	—	Thread Nipper Body complete, Nos. 22440, 22443, 22446, 34212, 34213, 34432, 34455, 34520 and 34561.....			

SINGER Needles should be used
in SINGER Machines.
These Needles and their Containers
are marked with the
Company's Trade Mark "SIMANCO." 1

Needles in Containers marked
"FOR SINGER MACHINES"
are NOT SINGER made needles. 2

**LIST OF PARTS COMPLETE
FOR**

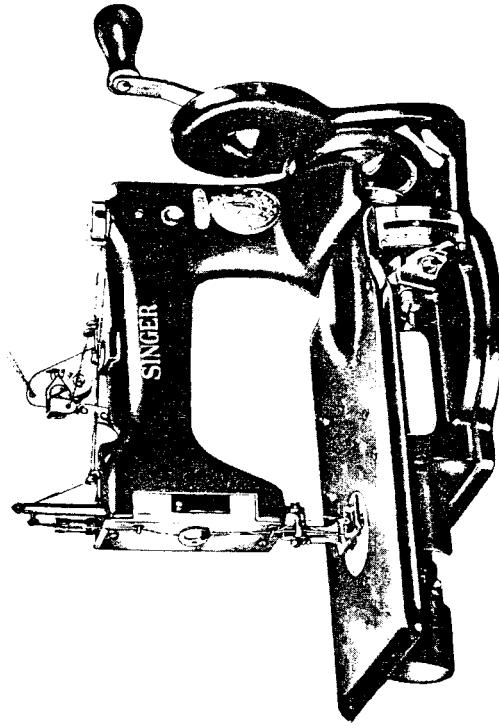

MACHINE No. 24-71

FOR SEWING ON LAUNDRY TAGS. HAS TWO NEEDLES, TWO LOOPERS; GAUGES FROM $\frac{1}{8}$ INCH TO $\frac{5}{8}$ INCH. THE MACHINE IS DESIGNED FOR USE IN LAUNDRIES FOR SEWING THE MARKING TAPE ON VARIOUS ARTICLES. THE TAPE IS STITCHED ON THE SIDES ONLY. THE MACHINE IS OPERATED BY HAND ATTACHMENT NO. 34616. HAS AUTOMATIC TENSION AND GRADUATED THREAD MEASURING DEVICE. THE GRADUATIONS ARE MADE TO AGREE WITH THOSE ON THE FEED REGULATOR INDEX PLATE. BY SETTING THE POINTERS ON THE MEASURING DEVICE AND THE FEED REGULATOR INDEX PLATE ON THE SAME FIGURE, THE EXACT AMOUNT OF THREAD REQUIRED FOR EACH STITCH WILL BE PULLED OFF. A KNIFE IS ATTACHED TO THE LOOPERS AND AT THE COMPLETION OF THE OPERATION, THE TURNING OF THE BALANCE WHEEL IN THE REVERSE DIRECTION CUTS THE THREAD CLOSE TO THE MATERIAL.

NO.	PLATE	NAME
34589	6861	Arm Rock Shaft.....
32034	6857	" " Crank (back) with 1259c and 1439c.....
1439c	6857	Arm Rock Shaft Crank (front) Position Screw.....
1259c	6857	Arm Rock Shaft Crank (back) Set Screw 1259c.....
34235	6861	Rotary Shaft with 1019c.....
34116	6857	" " " (front) with two 1259c.....
1259c	6857	Arm Rock Shaft Crank (front) Set Screw
34002	4248	" " " Gear with two 462c 462c
199d	6859	" " " Set Screw.....
34608	6860	Balance Wheel, 2 in. pulley.....
34191	4246	Cloth Plate with three 1602E.....
1602E	6858	" " Bushing.....
1104F	6859	" " Set Screw (large).....
219f	6859	" " " (small).....
34433	6861	Connecting Rod with 34434 and two 171e *34434
171e	6859	" " Cap.....
1139c	6859	" " " Screw.....
1520j	6858	" " Hinge Screw.....
34192	4248	Face Plate with 2827 and 34079.....
337d	6859	" " " Screw.....
34079	4248	" " Thread Guard (lower) with 8505.....
8505	6858	Face Plate Thread Guard (lower) Rivet.....
2827	6858	" " " " (upper) with 8505.....
8505	6858	Face Plate Thread Guard (upper) Rivet.....
9543	6857	" " " Nipper Disc.....
9544	6857	" " " Cover.....
228b	6857	" " " Screw.....
9600	6857	" " " Spring (heavy).....
9545	6857	Face Plate Thread Nipper Disc Spring (light).....
22338	6857	Feed Bar with 152f and 207c.....
152f	6857	" " Adjusting Screw.....
22339	4224	" " Hinge Pin.....
207c	4224	" " " Set Screw.....
9626	6855	" " Dog, 15 teeth (12 teeth to the inch)
		Note: When ordering No. 9626 state gauge required.
*34607	—	NO. PLATE NAME Arm, upper and lower (solid) with 130D and 34007.....
190b	6859	Feed Dog Screw.....

NO.	PLATE	NAME	NO.	PLATE	NAME
34187	6858	Feed Eccentric with two 1259c.....	34010	4246	Looper (left hand) Driving Shaft Gear (left hand) Cover.....
34090	4224	" Collar with 452c.....	164d	4248	Looper (left hand) Cover Screw.....
452e	4224	" " Set Screw.....	462c	4248	Looper (left hand) Cover Screw.....
1259c	6857	" " Set Screw.....	462c	4248	Looper (left hand) Cover Screw.....
34091	4224	" Sleeve.....	34002	4248	Looper (left hand) Set Screw.....
34092	4224	" Forked Connection.....	34011	4246	Looper (left hand) Driving Shaft Gear (right hand) with two 462c.....
378c	4224	" " Hinge Screw.....	34189	6858	" Roller with 1085c
1520j	6858	" " Nut	1832	4224	" " " Roller with 1085c
1085c	4224	" " " Screw Stud	1085c	4224	" " " Screw Stud
34189	6858	" Lifting Eccentric with two 1259c.....	1259c	6857	" " " Set Screw.....
34094	4225	" Regulator.....	34095	4225	" Crank with 230f and
34096	4225	Feed Regulator Crank Pn.....	34096	4225	" Set Screw.....
230f	4225	" " " Set Screw.....	34097	4225	" Hinge Screw.....
1215e	4225	" " " Indicator.....	34211	4225	" " " Hinge Pin.....
34097	4225	" " " Locking Screw.....	34098	4225	" " " Plate.....
335d	4225	" " " " Screw.....	335d	4225	" " " " Screw.....
1083c	4225	" " " " Washer.....	34099	4225	" Rock Shaft.....
34100	4225	" " " " Rock Shaft.....	34101	—	Feed Rock Shaft, complete, Nos. 34100 and 34102.....
*34007	—	Feed Rock Shaft and Looper Shaft Bracket with 145e.....	34102	4225	Feed Rock Shaft and Looper Shaft Bracket Screw.....
130d	6859	Feed Rock Shaft and Looper Shaft Bracket Screw.....	157b	4225	Feed Rock Shaft Crank with 157b.....
34102	4225	" " " Clamping Screw.....	307c	4225	" " " Screw Center.....
56814	—	" " " " 307c with 1513j.....	34170	4229	" " " " Connecting Link with two 1313e.....
1513j	4225	Feed Rock Shaft Screw Center Nut.....	35131	6860	Feed Rock Shaft Guide.....
286d	6859	" Thumb Screw.....	34287	6860	Looper (left hand) Driving Shaft.....
34288	6857	" Stud.....	34288	6857	Looper Cover with 34288.....
34609	6855	" (left hand) with 34610.....	34609	6855	Note: When ordering No. 34609 state gauge required.
34008	4248	Looper (left hand) Driving Shaft.....	34009	4248	" " " Gear (left hand) with two 462c.....
34009	4248	" " " Gear (left hand) with two 462c.....	34103	4229	Presser Bar.....
34104	4229	" " " Guide Bracket with 223E.....			

34010	4246	Looper (left hand) Driving Shaft Gear (left hand) Cover.....
164d	4248	Looper (left hand) Cover Screw.....
462c	4248	Looper (left hand) Driving Shaft Gear (left hand) Set Screw.....
34002	4248	Looper (left hand) Driving Shaft Gear (right hand) with two 462c.....
34011	4246	Looper (left hand) Driving Shaft Gear (right hand) Cover.....
578f	4248	Looper (left hand) Driving Shaft Gear (right hand) Cover Screw.....
462c	4248	Looper (left hand) Set Screw.....
460c	4237	Looper (left hand) Set Screw.....
34030	6858	" " " " Shaft with 460c.....
9640	6858	" " " " Bushing with 1264e.....
145e	6859	Looper (left hand) Shaft Bushing Clamping Screw.....
1264e	6859	Looper (left hand) Shaft Bushing Position Screw.....
34012	6857	Looper (left hand) Shaft Gear with two 462c.....
*462c	4248	Looper (left hand) Shaft Gear Set Screw.....
*34610	—	" " " Thread Cutting Knife
34600	6855	" (right hand) with 34601.....
1313e	4229	Note: When ordering No. 34600 state gauge required.
1019c	4229	Looper (right hand) Set Screw.....
*34601	—	" " " Thread Cutting Knife
34080	6856	Needle Bar with 2273.....
34170	4229	" " " Connecting Link with two 1313e.....
1313e	4229	Needle Bar Connecting Link Adjusting Screw.....
9570	4229	Needle Bar Thread Tube.....
207e	4224	" " " Clamp with 230h and two 620f.....
34013	6857	" " " Set Screw.....
620f	4248	" " " Set Screw.....
230h	4225	" Stop Pin.....
2273	6856	Presser Bar.....
34103	4229	" " " Guide Bracket with 223E.....
34104	4229	" " " "

NO.	PLATE	NAME	NO.	PLATE	NAME
223E 4229	Presser Bar Guide Bracket Adjusting Screw.....	34212 6856 Thread Nipper Body with two 34560....			
34105 4229	Presser Bar Guide Bracket Guide.....	34292 —— Thread Nipper Body complete, Nos. 22440, 457C 4229 " " " " Set Screw.....			
999f 4229	" " " " Set Screw.....	22443, 22446, 34212, 34213, 34432, 38540 4229 " " Lifter.....			
50293e 6859	" " Hinge Screw.....	34435, 34520 and 34561.....			
1521J 6858	" " " " Nut.....	1125B 6859 Thread Nipper Body Set Screw.....			
9534 4229	" " Spring.....	34430 —— " " Cap.....			
22405 4229	" " Washer.....	*34431 —— " " Stud.....			
34611 6855	" " Foot.....	34432 6856 " " " " 34431 with 34430			
		22440 6856 " " " " Washer.....			
		34213 6856 " " " " Disc (grooved)			
		22443 6856 " " " " Locking Washer.....			
		34520 6856 " " " " C a p (leather).....			
		22446 6856 Thread Nipper Ring.....			
		34560 6856 " " Position Pin.....			
		22449 6860 " " Rod.....			
		34580 —— " " " " 22449 with 1754E and 34506.....			
		34455 6856 Thread Nipper Spring.....			
		34561 6856 " " " " Washer (micarta)			
		19075 4237 " " Pull-off Lever with 1933.....			
		19076 4237 " " Cam with two 460C			
		460C 4237 " " " " Set Screw.....			
		701b 6859 " " Hinge Screw.....			
		1933 4237 " " Roller and Stud.....			
		29939 6856 " " Retaining Disc.....			
		1562J 6858 " " " " Regulating Thumb Nut Screw Stud.....			
		418D 6858 " " " " " " Nut.....			
		1735H 6858 " " " " " " Nut.....			
		43808 6856 " " " " Spring.....			
		34613 6856 " " Separating Disc.....			
		9699 6855 Throat Plate, for 9626.....			
		22434 to 22436.....			
		1170H 6858 Thread Nipper Adjusting Stud Hole Plug Screw.....			
		1754E 6858 Thread Nipper Adjusting Stud Lock Nut. 22434 6856 " " " " Washer (leather) lower.....			
		22435 6856 Thread Nipper Adjusting Stud Washer (leather) upper.....			
		22436 6856 Thread Nipper Adjusting Stud Washer (steel).....			

Note: When ordering No. 34611 state gauge required and also furnish sample of tape.

185H 6859	Presser Foot Screw.....	34028 6857 Thread Eyelet (double) top of arm.....
1121J 4229	Pressure Regulating Thumb Screw.....	330b 6859 " " Screw.....
34599 6860	Pulley and Thread Nipper Rod Eccentric $2\frac{1}{8}$ in. diam.....	34604 6856 " " Indicator and Thread Guide.....
1167E 4224	Pulley and Thread Nipper Rod Eccentric Screw.....	34612 —— " " " " 34604 with 418b, 1562b, 23258, 31605, 34613, 43808, 50222b and two each 1735h and 29939.....
50222D 6859	Thread Indicator and Thread Guide Screw 1735H 6858 " " " " " " Nut.....	50222D 6859 Thread Indicator and Thread Guide Screw 34605 6856 Thread Indicator Plate.....
23258 6856	Thread Indicator and Thread Guide Screw Washer.....	34505 6856 " " " " " " Nut.....
34506 ——		34506 " " " " " " Nut.....
190w 6859	Nut.....	22434 to 22436.....
34505 6856	Nipper Adjusting Stud.....	1170H 6858 Thread Nipper Adjusting Stud Hole Plug Screw.....
34506 ——	" " " " " " 34505 with	1754E 6858 Thread Nipper Adjusting Stud Lock Nut. 22434 6856 " " " " Washer (leather) lower.....
22435 6856	Thread Nipper Adjusting Stud Washer (leather) upper.....	22435 6856 Thread Nipper Adjusting Stud Washer (leather) upper.....
22436 6856	Thread Nipper Adjusting Stud Washer (steel).....	22436 6856 Thread Nipper Adjusting Stud Washer (steel).....

Note: When ordering No. 9699 state gauge required.

244J 6855	Throat Plate Screw.....
	22434 to 22436.....

Note: When ordering No. 9699 state
gauge required.

HAND ATTACHMENT PARTS	
FOR 24-71 MACHINE	
NO.	PLATE
34614	6863 Base with two 34075.....
34075	" " Position Stud.....
34076	6863 Bracket.....
690b	6859 " " Screw.....

18 HAND ATTACHMENT PARTS

NO.	PLATE	NAME	NO.	PLATE	NAME
7962	6861	Crank Handle (wood).....	1152J	6861	Machine Thumb Screw, for power table,
7963	—	" Stud.....	for 24-71 Machine.....		
7964	—	" " Washer.....	2015	6857	Machine Thumb Screw Cushion (rubber).
34615	6861	Lever.....	9842	6857	" " Washer.....
50137J	6859	" Screw.....	36569	4235	Oiler with 36571.....
34617	6861	Crank complete, Nos. 7962 to 7964 and 34615.....	36570	—	" 36569, filled with oil.....
34618	6863	Driver.....	36571	4235	" Spout, 1 3/4 in. long, with 36807.....
34072	6857	Pinion.....	36807	6857	" " Washer (leather).....
1327F	6859	" Screw Stud.....	26026	4235	Screw Driver.....
1620J	6858	" " Nut.....	25539	4235	Stiletto.....
240D	6859	" Set Screw.....	19079	6858	Wrench for 1629.....
34019	6860	Gear.....			
9566	6860	Cover.....			
399A	6859	" Screw.....			
659D	6859	" Screw Stud.....			
34073	6857	Pinion (intermediate).....			
45F	6859	" Screw Stud.....			
34616	6863	Hand Attachment complete, Nos. 45F, 240D, 659D, 1327F, 1620J, 9566, 34072, 34073, 34076, 31614, 34617 to 31619 and two each 399A, 690D, 50137J and wood screws 1 in. No. 13.....			

PARTS FOR NEEDLE BAR STOP DEVICE

**THESE PARTS ARE FURNISHED WITH THE 24-71 MACHINE
ONLY UPON REQUEST**

NO.	PLATE	NAME	NO.	PLATE	NAME
34624	6864	Needle Bar Stop Lever.....	4884	4236	Treadle.....
701C	6864	" " Hinge Screw.....	4885	4236	Treadle complete, Nos. 4879, 4881 to 4884 and two wood screws 1 in. No. 16.....
34625	6864	" " Spring.....	34118	—	Foot Lifter complete, Nos. 21D, 184D, 766B, 4885, 6439, 19081, 34110 and 34111.....
170J	6864	" " Stud.....			
34626	6864	" " Stop Collar with two 1259C.....			
1259C	6864	Needle Bar Stop Lever Stop Collar Set Screw.....			

ACCESSORIES

NO.	PLATE	NAME	NO.	PLATE	NAME
9843	6862	Machine Cushion (cloth).....	14224	—	Chain, length 10 1/4 in., with 56864.....
474J	6861	" Thumb Screw, for power table, for 24-70 Machine.....	56864	6858	" Hook.....
			34110	4235	Lifting Lever.....
			21D	6859	" Hinge Screw.....
			34111	6858	" " Link.....

FOOT LIFTER PARTS

NO.	PLATE	NAME
1327	—	Chain, length 10 1/4 in., with 56864.....
26026	4235	Screw Driver.....
25539	4235	Stiletto.....
19079	6858	Wrench for 1629.....

KNEE LIFTER PARTS

NO.	PLATE	NAME
14224	—	Chain, length 10 1/4 in., with 56864.....
56864	6858	" Hook.....
34110	4235	Lifting Lever.....
21D	6859	" Hinge Screw.....
34111	6858	" " Link.....

NO.	PLATE	NAME
766D	6859	Lifting Lever Link Hinge Screw.....
19081	6858	" " Spring.....
184D	6859	" " Stop Screw.....
7124	4236	Rock Shaft.....
2764	4236	" Hanger with two wood screws 1 in. No. 10.....
6335	4236	Rock Shaft Knee Arm.....
6336	—	" " " 6335 with 2766 and 2767.....
2766	4236	Rock Shaft Knee Arm Hub with 356c.....
356c	6859	" " " Set Screw.....
2767	4236	" " " Plate with 356c.....
356c	6859	" " " Set Screw.....
6337	4236	" Lifting Bracket with two 356c.....
7125	4236	" " " Hook.....
356c	6859	" " " Set Screw.....
356c	6859	" " " Set Screw.....
2770	4236	" Stop Dog with 356c.....
356c	6859	" " " Set Screw.....
7126	4236	Rock Shaft complete, Nos. 2770, 6336, 6337, 7124, 7125 and two 2761.....
34204	—	Knee Lifter complete (power table) Nos. 21b, 184D, 766b, 7126, 14224, 19081, 34110 and 34111.....

TAPE HOLDER

1 7/8 IN. DISC

NO.	PLATE	NAME
26056	2785	Bracket with tape guide.....
26057	2785	Disc.....
26058	6858	" Sleeve.....
1541D	6858	Tension Regulating Thumb Nut.....
26059	6858	" Spring.....
26060	2785	Tape Holder complete, Nos. 1520J, 1541D and 26056 to 26059.....
1520J	6858	Tape Holder Nut.....

THREAD UNWINDER

(FOR TWO SPOOLS)

FOR 24-71 MACHINE

NO.	PLATE	NAME
225395	7233	Spool Rest with 201018C.....
225388	7233	" Rod.....

NO.	PLATE	NAME
200383C	6859	Spool Rest Rod Set Screw.....
201018C	6859	" " Set Screw.....
202490	7233	" Stand with 200383C.....
225391	7233	Thread Guide.....
201696J	6858	" " Lock Nut.....
225326	6862	" " Position Cup.....
225324	6862	" " Rod with 208E and 225322
208E	6859	" " " Screw.....
225322	6857	" " " Washer.....
225396	7233	Thread Unwinder complete, Nos. 201696J, 202490, 225324, 225326, 225388, 225395, two 225391 and three wood screws ^{7/8} in. No. 12.....
27739	6862	Thread Cone (wood) for large cones.....
225390	6862	" " Holder, for inverted cones.....

Note: Nos. 27739 and 225390 are used with,
but not included in 225396.

**SINGER Needles should be used
in SINGER Machines.**
These Needles and their Containers
are marked with the
Company's Trade Mark "SIMANCO. **" 1

**Needles in Containers marked
"FOR SINGER MACHINES"**
are NOT SINGER made needles. 2

NUMERICAL LIST OF PARTS

No., PLATE	NAME
21d 6859	Lifting Lever Hinge Screw for 34118 and 34204.....
45f 6859	Hand Attachment Pinion (intermediate) Screw Stud for 34616.....
130d 6859	Feed Rock Shaft Bracket Screw for 34337
130d 6859	" " and Looper Shaft Bracket Screw for 34607.....
145e 6859	Looper (left hand) Shaft Bushing Clamping Screw for 34007.....
152f 6857	Feed Bar Adjusting Screw for 22338.....
157n 4225	" Rock Shaft Crank Clamping Screw for 34102.....
164b 4248	Looper (left hand) Driving Shaft Gear (left hand) Cover Screw for 24-71 Ma- chine.....
170b 6864	Needle Bar Stop Lever Spring Stud for 24-71 Machine.....
171e 6859	Connecting Rod Cap Screw for 34433.....
184d 6859	Lifting Lever Stop Screw for 34118 and 34204.....
185bu 6859	Presser Foot Screw.....
190d 6859	Feed Dog Screw.....
190w 6859	Thread Indicator Plate Screw
199b 6859	Arm Rotary Shaft Screw
207c 4224	Feed Bar Hinge Pin Set Screw for 22338 and 34088.....
207e 4224	Needle Bar Connecting Stud Clamping Screw for 9570.....
208e 6859	Thread Unwinder Thread Guide Rod Screw for 226324.....
219f 6859	Cloth Plate Screw (small).....
223e 4229	Presser Bar Guide Bracket Adjusting Screw for 34104.....
228d 6857	Face Plate Thread Nipper Disc Cover Screw for 24-71 Machine.....
230f 4225	Feed Regulator Crank Set Screw for 34095
230h 4225	Needle Set Screw for 34013.....
241b 6859	Hand Attachment Driver Union Set Screw for 34616.....
244l 6855	Throat Plate Screw.....
286d 6859	Guide Thimble Screw.....
307c 4225	Feed Rock Shaft Screw Center for 56814.
330d 6859	Thread Eyelet Screw for 24-71 Machine..

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME	NO.	PLATE	NAME
335D	4225	Feed Regulator Indicator Plate Screw	766D	6859	Lifting Lever Link Hinge Screw for 34118 and 34204
337D	6859	Face Plate Screw	999F	4229	Presser Bar Guide Bracket Set Screw
356C	6859	Rock Shaft Knee Arm Hub Set Screw for 2766	1008D	6859	Spool Bracket Screw for 24-70 Machine
356C	6859	Rock Shaft Knee Arm Plate Set Screw for 2767	1009C	6859	" Spindle Set Screw for 34137
356C	6859	Rock Shaft Lifting Bracket Hook Set Screw for 6337	1019C	4229	Looper Set Screw for 34186
356C	6859	Rock Shaft Lifting Bracket Set Screw for 6337	1019C	4229	" (right hand) Set Screw for 34235
356C	6859	Rock Shaft Stop Dog Set Screw for 2770	1083C	4225	Feed Regulator Locking Screw
378C	4224	Feed Forked Connection Hinge Screw	1085C	4224	" Forked Connection Roller Screw
389A	6859	Hand Attachment Gear Cover Screw for 34616	1104F	6859	Cloth Plate Screw (large)
418D	6858	Thread Retaining Screw Stud for 34606 and 34612	1105E	4229	Looper Gate Hinge Screw for 24-70 Ma- chine
452C	4224	Feed Eccentric Collar Set Screw for 34090	1121J	4229	Pressure Regulating Thumb Screw
457C	4229	Presser Bar Guide Bracket Guide Set Screw	1125B	6859	Thread Nipper Body Set Screw
460C	4237	Looper (left hand) Set Screw for 34030	1139C	6859	Connecting Rod Hinge Screw
460C	4237	Thread Controller Post Set Screw for 24-70 Machine	1152J	6861	Machine Thumb Screw, for power table, for 24-71 Machine (Accessories)
460C	4237	Looper Pull-off Lever Cam Set Screw for 19076	1167E	4224	Pulley and Thread Nipper Rod Eccentric Screw
462C	4248	Arm Rotary Shaft Gear Set Screw for 34002	1170H	6858	Thread Nipper Adjusting Stud Hole Plug Screw
462C	4248	Looper (left hand) Driving Shaft Gear (left hand) Set Screw for 34009	1215E	4225	Feed Regulator Hinge Screw
462C	4248	Looper (left hand) Driving Shaft Gear (right hand) Set Screw for 34002	1259C	6857	Arm Rock Shaft Crank (back) Set Screw for 32034
462C	4248	Looper (left hand) Driving Shaft Gear Set Screw for 34012	1259C	6857	Arm Rock Shaft Crank (front) Set Screw for 34116
474J	6861	Machine Thimble Screw, for power table, for 24-70 Machine (Accessories)	1259C	6857	Feed Eccentric Set Screw for 34187
578F	4248	Looper (left hand) Driving Shaft Gear (right hand) Cover Screw for 24-71 Ma- chine	1259C	6857	" Lifting Eccentric Set Screw for 34189
620F	4248	Needle Clamp Set Screw for 34013	1259C	6864	Needle Bar Stop Lever Stop Collar Set Screw for 34626
659D	6859	Hand Attachment Gear Screw Stud for 34616	1264E	6859	Looper (left hand) Shaft Bushing Position Screw for 9640
701C	6864	Needle Bar Stop Lever Hinge Screw for 24-71 Machine	1313E	4229	Needle Bar Connecting Link Adjusting Screw for 34170
701D	6859	Thread Pull-off Lever Hinge Screw	1327F	6859	Hand Attachment Driver Pinion Screw Stud for 34616
690D	6859	Hand Attachment Bracket Screw for 34616	1439C	6857	Arm Rock Shaft Crank (back) Position Screw for 32034
691A	6859	Spool Thread Guiding Disc Screw for 24-70 Machine	1513J	4225	Feed Rock Shaft Screw Center Nut for 56814
691A	6859	"	1520I	6858	Connecting Rod Hinge Screw Nut
691A	6859	"	1520J	6858	Feed Forked Connection Hinge Screw Nut
691A	6859	"	1520L	6858	Tape Holder Nut for 26060
701C	6864	"	1521J	6858	Presser Bar Lifter Hinge Screw Nut
701D	6859	"	1511D	6858	Tape Holder Tension Regulating Thimb Nut for 26060

NO.	PLATE	NAME	NO.	PLATE	NAME
1562J	6858	Thread Retaining Regulating Thumb Nut for 34606 and 34612.....	6439	—	Chain, 36 in. to 45 in., with 56864 and 56865, for 34118.....
1602E	6858	Cloth Plate Bushing for 34086 and 34191.....	7124	4236	Rock Shaft for 712e.....
1620J	6858	Hand Attachment Driver Pinion Screw • Stud Nut for 34616.....	7125	4236	" " Lifting Bracket Hook for 7126
1629C	4229	Needle Clamping Nut for 24-70 Machine	7126	4236	Rock Shaft complete for 34204, Nos. 2770, 6336, 6337, 7124, 7125 and two 2764.....
1735H	6858	Thread Indicator and Thread Guide Screw Nut for 34606 and 34612.....	7962	6861	Hand Attachment Crank Handle (wood) for 34617.....
1735H	6858	Thread Retaining Screw Stud Nut for 34606 and 34612.....	7963	—	Hand Attachment Crank Handle Stud for 34617.....
1754E	6858	Thread Nipper Adjusting Stud Lock Nut for 34580.....	7964	—	Hand Attachment Crank Handle Stud for 34617.....
1832	4224	Feed Forked Connection Roller with 1085c.....	8505	6858	Face Plate Thread Guard Rivet for 2827
1933	4237	Thread Pull-off Lever Roller and Stud for 19075.....	8505	6858	" " (lower) Rivet for 34079.....
2015	6857	Machine Thumb Screw Cushion, rubber (Accessories).....	8505	6858	Face Plate Thread Guard (upper) Rivet for 2827.....
2049	6858	Spool Bracket Dowel Pin for 24-70 Machine.....	9534	4229	Presser Bar Spring.....
2273	6856	Needle Stop Pin for 34080.....	9543	6857	Face Plate Thread Nipper Disc for 24-71 Machine.....
2764	4236	Rock Shaft Hanger with two wood screws 1 in. No. 10, for 7126.....	9544	6857	Face Plate Thread Nipper Disc Cover for 24-71 Machine.....
2766	4236	Rock Shaft Knee Arm Hub with 356c, for 6336.....	9545	6857	Face Plate Thread Nipper Disc Spring (light) for 24-71 Machine.....
2767	4236	Rock Shaft Knee Arm Plate with 356c, for 6336	9566	6860	Hand Attachment Gear Cover for 34616
2770	4236	Rock Shaft Stop Dog with 356c, for 7126	9570	4229	Needle Bar Connecting Stud with 207E.....
2827	6858	Face Plate Thread Guard with 8505, for 34311.....	9578	6855	Needle Dog, 15 teeth (16 teeth to the inch) for 24-70 Machine.....
2827	6858	Face Plate Thread Guard (upper) with 8505, for 34192.....	9600	6857	Face Plate Thread Nipper Disc Spring (heavy) for 24-71 Machine.....
4879	4235	Chain Connecting Link for 4885.....	9606	6855	Throat Plate for 9578, for 24-70 Machine
		Nos. 4881 to 4884 for 4885.....	9611	4229	Needle Bar Thread Tube for 24-71 Machine.....
4881	4236	Treadle.....	9626	6855	Feed Dog, 15 teeth (12 teeth to the inch) for 24-71 Machine.....
4882	4235	" Shaft.....	9640	6858	Looper (left hand) Shaft Bushing with 1264b, for 24-71 Machine.....
4883	4235	" Spring.....	9699	6855	Throat Plate, for 9626, for 24-71 Machine
4884	4236	" Stand.....	9812	6857	Machine Thump Screw Washer (Accessories).....
4885	4236	Treadle complete for 34118, Nos. 4879, 4881 to 4884 and two wood screws 1 in. No. 16.....	9843	6862	Machine Cushion, cloth (Accessories).....
6335	4236	Rock Shaft Knee Arm for 6336.....	14224	—	Chain, length 10 $\frac{1}{4}$ in., with 56864, for 34204.....
6336	—	" " " 6335 with 2766 and 2767 for 7126.....	19066	4222	Spool Spindle for 24-70 Machine.....
6337	4236	Rock Shaft Lifting Bracket with two 356c, for 7126.....	19067	4222	" Thread Guiding Disc for 24-70 Machine.....

NO.	PLATE	NAME	NO.	PLATE	NAME
19075	4237	Thread Pull-off Lever with 1933.....	34002	4248	Looper (left hand) Driving Shaft Gear (right hand) with two 460c Machine.....
19076	4237	" " Cam with two 460c			
19079	6858	Wrench for 1629 (Accessories).....			
19081	6858	Lifting Lever Spring for 34118 and 34204	*34007	—	Feed Rock Shaft and Looper Shaft Bracket
22338	6857	Feed Bar with 152f and 207c, for 24-71 Machine.....			with 145e, for 34607.....
22339	4224	Feed Bar Hinge Pin.....			Nos. 34008 to 34013 FOR 24-71 MACHINE
22348	6862	" Rock Shaft Bracket for 34357.....	34008	4248	Looper (left hand) Driving Shaft.....
22349	4229	Looper Gate for 24-70 Machine.....	34009	4248	" " " Gear (left hand) with two 462c.....
22350	4229	" Spring for 24-70 Machine.....			
22405	4229	Presser Bar Spring Washer.....	34010	4246	Looper (left hand) Driving Shaft Gear (left hand) Cover.....
22129	4237	Thread Controller Spring for 34169.....	34011	4246	Looper (left hand) Driving Shaft Gear (right hand) Cover.....
22131	6856	" Nipper Adjusting Stud Washer (leather) lower, for 31506.....			
22135	6856	Thread Nipper Adjusting Stud Washer (leather) upper, for 34506.....	34012	6857	Looper (left hand) Shaft Gear with two 462c.....
22436	6856	Thread Nipper Adjusting Stud Washer (steel) for 34506.....	34013	6857	Needle Clamp with 230u and two 620f.....
22440	6856	Thread Nipper Cap Washer for 34292.....	34028	6857	Thread Eyelet (double) top of arm, for 24-71 Machine.....
22443	6856	" Locking Washer for 34292.....	34030	6858	Looper (left hand) Shaft with 460c, for 24-71 Machine.....
22446	6856	" Ring for 34292.....			
22449	6860	" Rod for 34580.....	34072	6857	Hand Attachment Driver Pinion for 34616.....
22456	4237	" Take-up for 34134.....			
22458	4237	" Guide (top of arm) for 24-70 Ma- chine.....	34073	6857	Hand Attachment Pinion (intermediate) for 34616.....
23258	6856	Thread Indicator and Thread Guide Screw Washer for 34006 and 34612.....	34075	6857	Hand Attachment Base Position Stud for 34614.....
25539	4235	Stiletto (Accessories).....			
26026	4235	Screw Driver (Accessories).....	34076	6863	Hand Attachment Bracket for 34616.....
		Nos. 26056 to 26059 FOR 24060	34079	4248	Face Plate Thread Guard (lower) with 8505, for 34192.....
26056	2785	Tape Holder Bracket with tape guide.....			
26057	2785	" " Disc.....	34080	6856	Needle Bar with 2273, for 24-71 Machine.
26058	6858	" " " Sleeve.....	34086	4222	Cloth Plate with three 1602e, for 24-70 Machine.....
26059	6858	" " " Tension Spring.....	34088	4224	Feed Bar with 207c, for 24-70 Machine.....
26060	2785	Tape Holder, 1 7/8 in. disc, complete Nos. 1520a, 1541b and 26056 to 26059.....	34090	4224	" Eccentric Collar with 452c.....
27739	6862	Thread Unwinder Thread Cone (wood) for large cones, for 225396.....	34091	4224	" " " Sleeve.....
29039	6856	Thread Retaining Disc for 34606 and 34612.....	34092	4224	" Forked Connection.....
32026	6860	Balance Wheel, 2 in. pulley, for 24-70 Machine.....	34093	4224	" Lifting Eccentric Connection for 24-70 Machine.....
32034	6857	Arm Rock Shaft Crank (back) with 1259c and 1439c.....	34094	4225	Feed Regulator.....
34002	4248	Arm Rotary Shaft Gear with two 462c, for 24-71 Machine.....	34095	4225	" " " Crank with 230f and 34096
			34096	4225	" " " Pin for 34095.....
			34097	4225	" " " Indicator.....
			34098	4225	" " " Plate.....
			34099	4225	" " " Locking Screw Washer.....
			34100	4225	" Rock Shaft for 34101.....

NO.	PLATE	NAME	NO.	PLATE	NAME
34101	—	Feed Rock Shaft complete, Nos. 34100 and 34102.....	*34357	—	Arm, upper and lower (solid) with 130D and 22348, for 24-70 Machine.....
34102	—	Feed Rock Shaft Crank with 157B, for 34101.....	34418	6855	Looper Washer for 24-70 Machine.....
34103	4225	Presser Bar.....	34430	—	Thread Nipper Cap for 34432.....
34104	4229	" Guide Bracket with 223E.....	*34431	—	" Stud for 34432.....
34105	4229	" " " Guide.....	34432	6856	" " " 34431 with 34430, for 34292.....
34110	4235	Lifting Lever for 34118 and 34204.....	34433	6861	Connecting Rod with 34434 and two 171E
34111	6858	" Link for 34118 and 34204.....	*34434	—	" Cap for 34433.....
34116	6857	Arm Rock Shaft Crank (front) with two 1259C.....	34455	6856	Thread Nipper Spring for 34292.....
34118	—	Foot Lifter complete, Nos. 21D, 184D, 766D, 4885, 6439, 19081, 34110 and 34111.....	34505	6856	" " Adjusting Stud for 34506
34134	4237	Needle Bar with 22456, for 24-70 Machine	34506	—	" " " 34505 with
34137	6862	Spool Bracket with 1009C, for 24-70 Machine.....	34560	6856	22434 to 22436, for 34580.....
34169	4237	Thread Controller Post with 22429, for 24-70 Machine.....	34561	6856	Thread Nipper Locking Washer Cap (leather) for 34292.....
34170	4229	Needle Bar Connecting Link with two 1313E.....	34580	—	Thread Nipper Rod 22449 with 1754E and 34506.....
34171	4237	Thread Eyelet (double) for 24-70 Machine	34589	6861	Arm Rock Shaft.....
34186	6861	Arm Rotary Shaft with 1019C, for 24-70 Machine.....	34599	6860	Pulley and Thread Nipper Rod Eccentric, $2\frac{3}{8}$ in. diam.....
34187	6858	Feed Eccentric with two 1259C.....	34600	6855	Looper with 34601, for 24-70 Machine.....
34189	6858	" Lifting Eccentric with two 1259C.....	34600	6855	" (right hand) with 34601, for 24-71 Machine.....
34191	4246	Cloth Plate with three 1602E, for 24-71 Machine.....	*34601	—	Looper Thread Cutting Knife for 34600.....
34192	4248	Face Plate with 2827 and 34079, for 24-71 Machine.....	*34601	—	" (right hand) Thread Cutting Knife for 34600.....
34204	—	Knee Lifter complete (power table) Nos. 21D, 184D, 766D, 7126, 11224, 19081, 34110 and 34111.....	34602	6855	Presser Foot with 34603 and 30470L, for 24-70 Machine.....
34211	4225	Feed Regulator Indicator Hinge Pin.....	34603	6855	Presser Foot Spring Guide for 34602.....
34212	6856	Thread Nipper Body with two 34560, for 34292.....	34604	6856	Thread Indicator and Thread Guide for 34606 and 34612.....
34213	6856	Thread Nipper Disc (grooved) for 34292.....	34605	6856	Thread Indicator Plate for 34606 and 34612.....
34235	6861	Arm Rotary Shaft with 1019C, for 24-71 Machine.....	34606	—	Thread Indicator and Thread Guide 34604 with 418D, 1562J, 23258, 34605, 43808, 50222D and two each 1735H and 29939, for 24-70 Machine.....
34287	6860	Looper Cover with 34288, for 24-71 Machine.....	*34607	—	Arm, upper and lower (solid) with 130D 34007, for 24-71 Machine.....
34288	6857	Looper Cover Stud for 34287.....	34608	6860	Balance Wheel, 2 in. pulley, for 24-71 Machine.....
34292	—	Thread Nipper Body complete, Nos. 22440, 22443, 22446, 34212, 34213, 34432, 34455, 34520 and 34561.....	34609	6855	Looper (left hand) with 34610, for 24-71 Machine.....
34311	6860	Face Plate with two 2827, for 24-70 Machine.....			

NO.	PLATE	NAME	NO.	PLATE	NAME
*34610	—	Looper (left hand) Thread Cutting Knife for 34609.....	201018c	6859	Thread Unwinder Spool Rest Set Screw for 225395.....
34611	6855	Presser Foot for 24-71 Machine.....	201606c	6858	Thread Unwinder Thread Guide Lock Nut for 225396.....
34612	—	Thread Indicator and Thread Guide 34604 with 418p, 1562j, 23258, 34605, 34613, 43808, 50222p and two each 1735u and 29339, for 24-71 Machine.....	202490	7233	Thread Unwinder Spool Stand with 200382c, for 225396.....
34613	6856	Thread Separating Disc for 34612.....	225322	6857	Thread Unwinder Thread Guide Rod Washer, for 225324.....
34614	6863	Hand Attachment Base with two 34075, for 34616.....	225324	6862	Thread Unwinder Thread Guide Rod with 208e and 225322, for 225396.....
34615	6861	Hand Attachment Crank Lever for 34617	225326	6862	Thread Unwinder Thread Guide Position Cap for 225396.....
34616	6863	Hand Attachment complete for 24-71 Machine, Nos. 45f, 240b, 659b, 1327f, 1620b, 9506, 34072, 34073, 34076, 34614, 34617 to 34619 and two each 399a, 690d, 50137j and wood screws 1 in. No. 13.....	225388	7233	Thread Unwinder Spool Rest Rod for 225396.....
34617	6861	Hand Attachment Crank complete for 34616, Nos. 7962 to 7964 and 34615.....	225390	6862	Thread Unwinder Thread Cone Holder, for inverted cones, for 225396.....
34618	6863	Hand Attachment Driver for 34616.....	225391	7233	Thread Unwinder Guide for 225396.....
34619	6860	" " " Gear for 34616.....	225395	7233	Thread Unwinder Spool Rest with 201018c, for 225396.....
34624	6864	Needle Bar Stop Lever for 24-71 Machine.....	225396	7233	Thread Unwinder complete, for two spools, for 24-71 Machine, Nos. 201696b, 202490, 225324, 225326, 225388, 225395, two 225391 and three wood screws $\frac{7}{8}$ in. No. 12.....
34625	6864	" " " Spring for 24-71 Machine.....			
34626	6864	Needle Bar Stop Lever Stop Collar for 24-71 Machine.....			
35131	6860	Guide.....			
36569	4235	Oiler with 36571, for 36570.....			
36570	—	" 36569, filled with oil (Accessories).....			
36571	4235	" Spout, 13 $\frac{1}{4}$ in. long, with 36807, for 36569.....			
36807	6857	Oiler Spout Washer (leather) for 36571.....			
38540	4229	Presser Bar Lifter.....			
43808	6856	Thread Retaining Spring for 34606 and 34612.....			
501374	6859	Hand Attachment Crank Lever Screw for 34616.....			
50222p	6859	Thread Indicator and Thread Guide Screw for 34606 and 34612.....			
50293c	6859	Presser Bar Lifter Hinge Screw.....			
50470	6855	" Foot Spring Guide Screw for 34602 Feed Rock Shaft Screw Center 307c with 1513j.....			
56814	—	Needles in Containers marked "FOR SINGER MACHINES" These Needles and their Containers are marked with the Company's Trade Mark "SIMANCO, **" 1			
56861	6858	Chain Hook for 14224.....			
56861	6858	" " (large) for 6439.....			
56865	6858	" " (small) for 6439.....			
200383c	6859	Thread Unwinder Spool Rest Rod Set Screw for 202490.....			

SINGER Needles should be used in SINGER Machines.
These Needles and their Containers are marked with the Company's Trade Mark "SIMANCO, **" 1

Needles in Containers marked "FOR SINGER MACHINES"
are NOT SINGER made needles. 2

PLATE 2785 - ONE-HALF SIZE

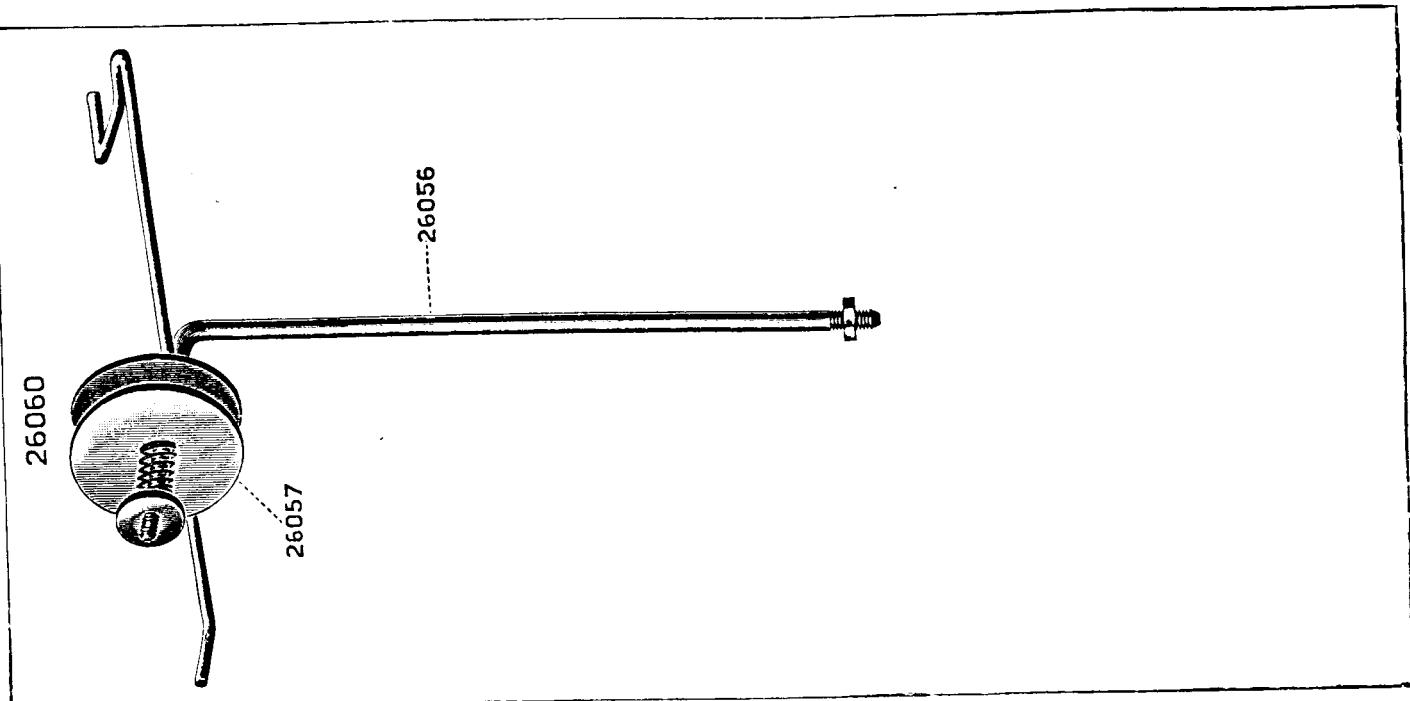


PLATE 4222—ONE-HALF SIZE

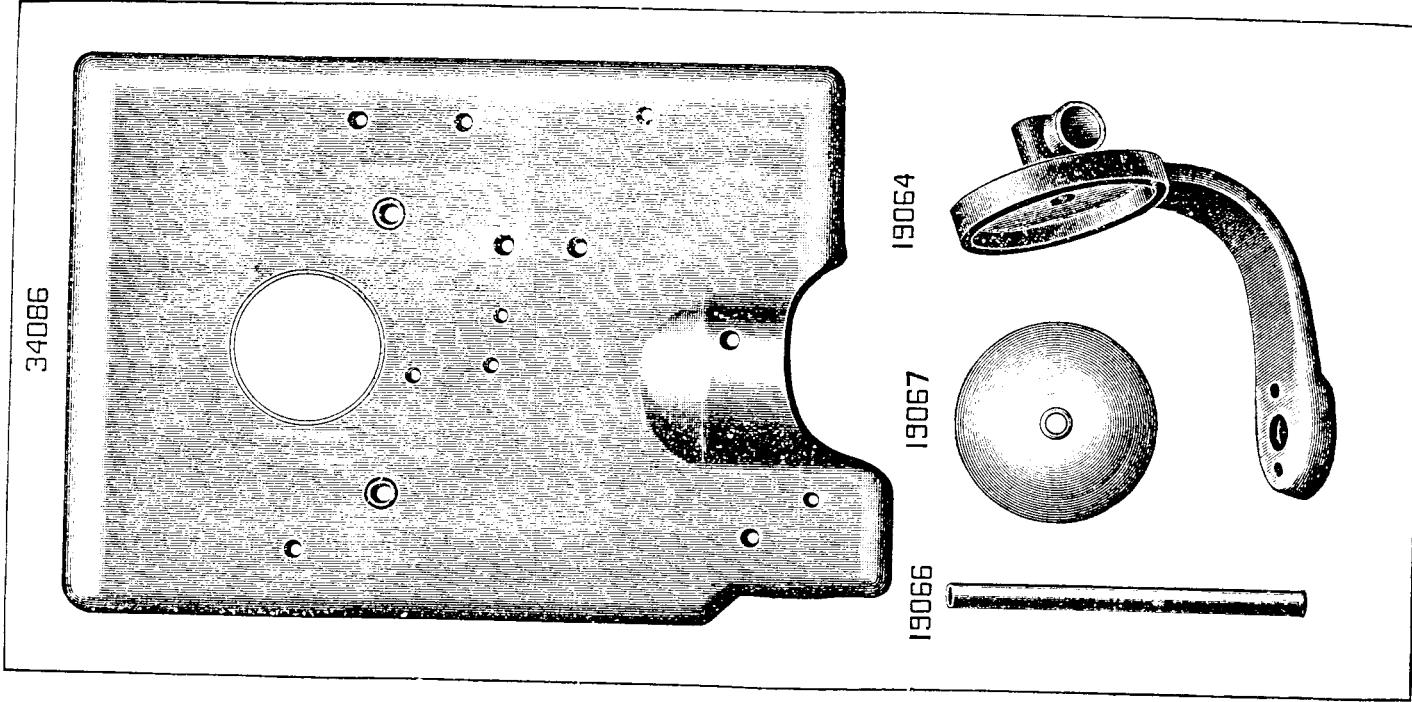


PLATE 4224—FULL SIZE

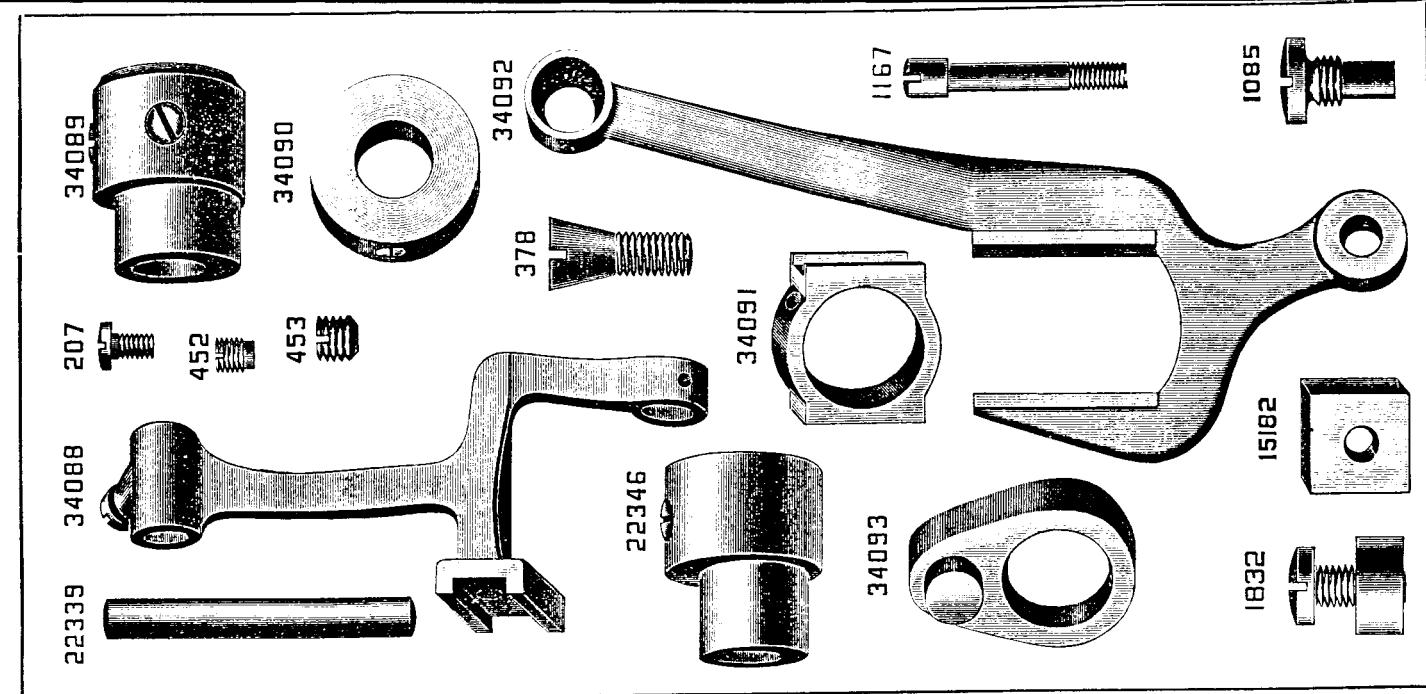


PLATE 4229—FULL SIZE

PLATE 4229—FULL SIZE

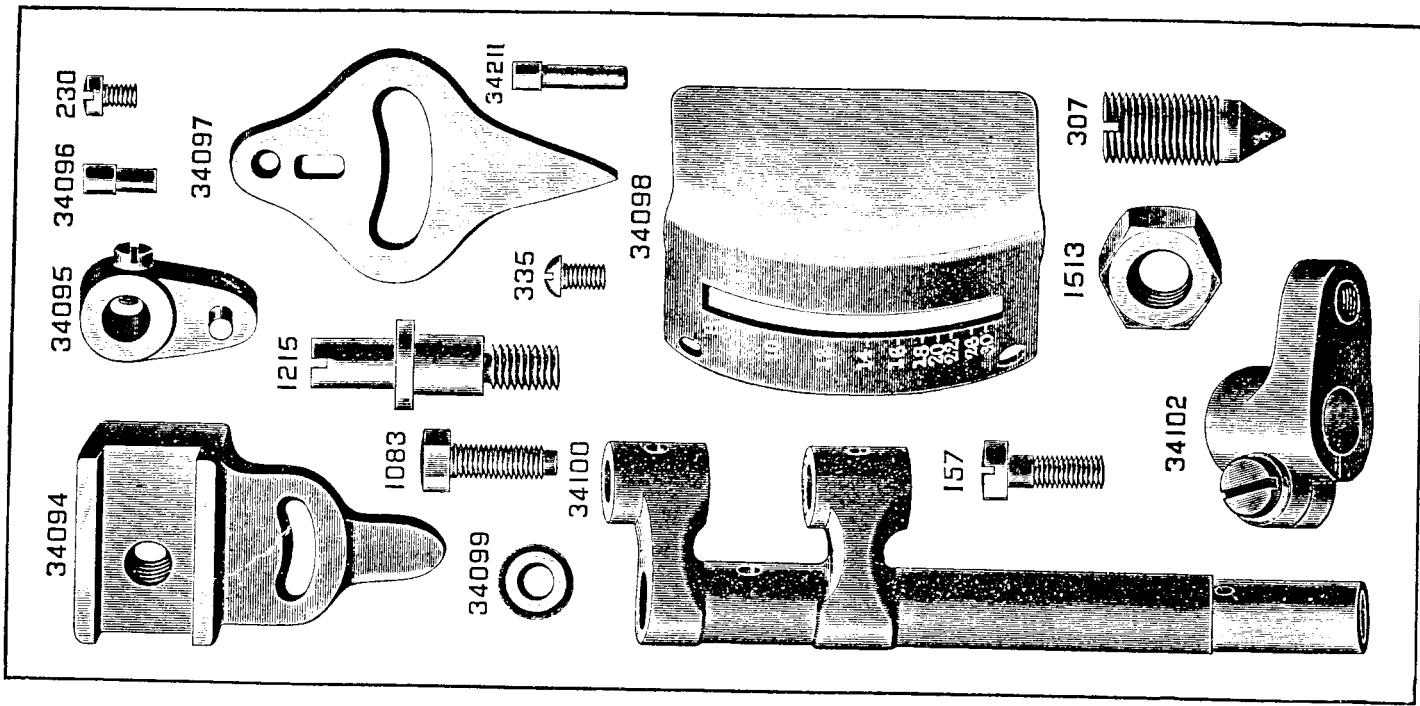
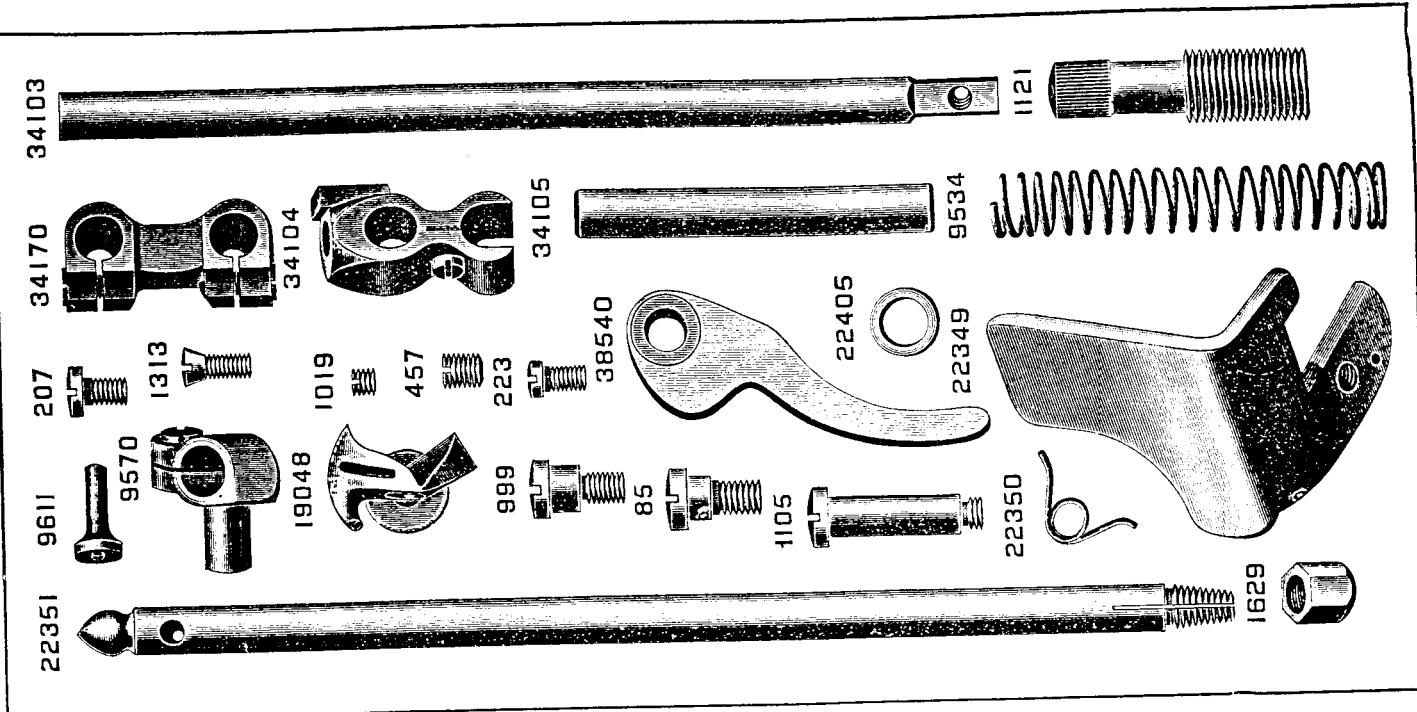


PLATE 4236—ONE-FOURTH SIZE

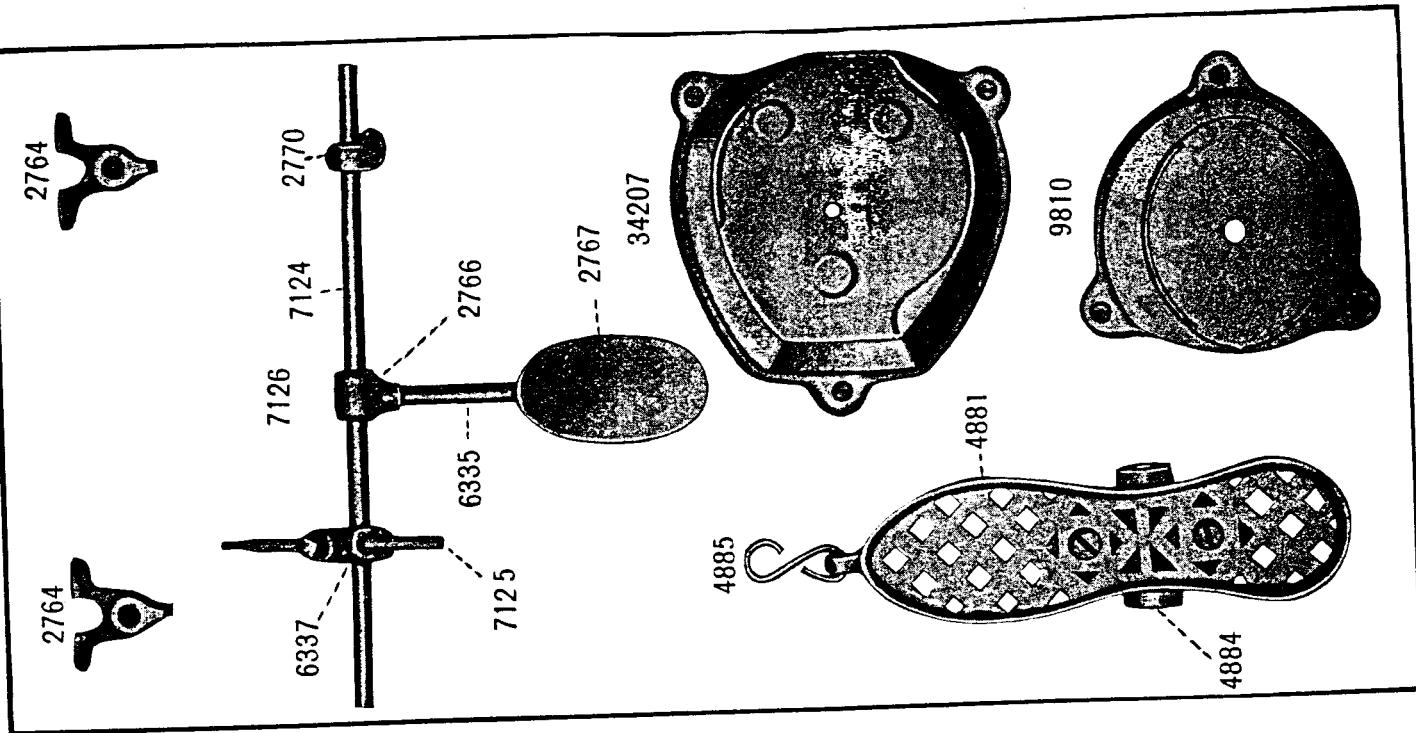


PLATE 4235—ONE-HALF SIZE

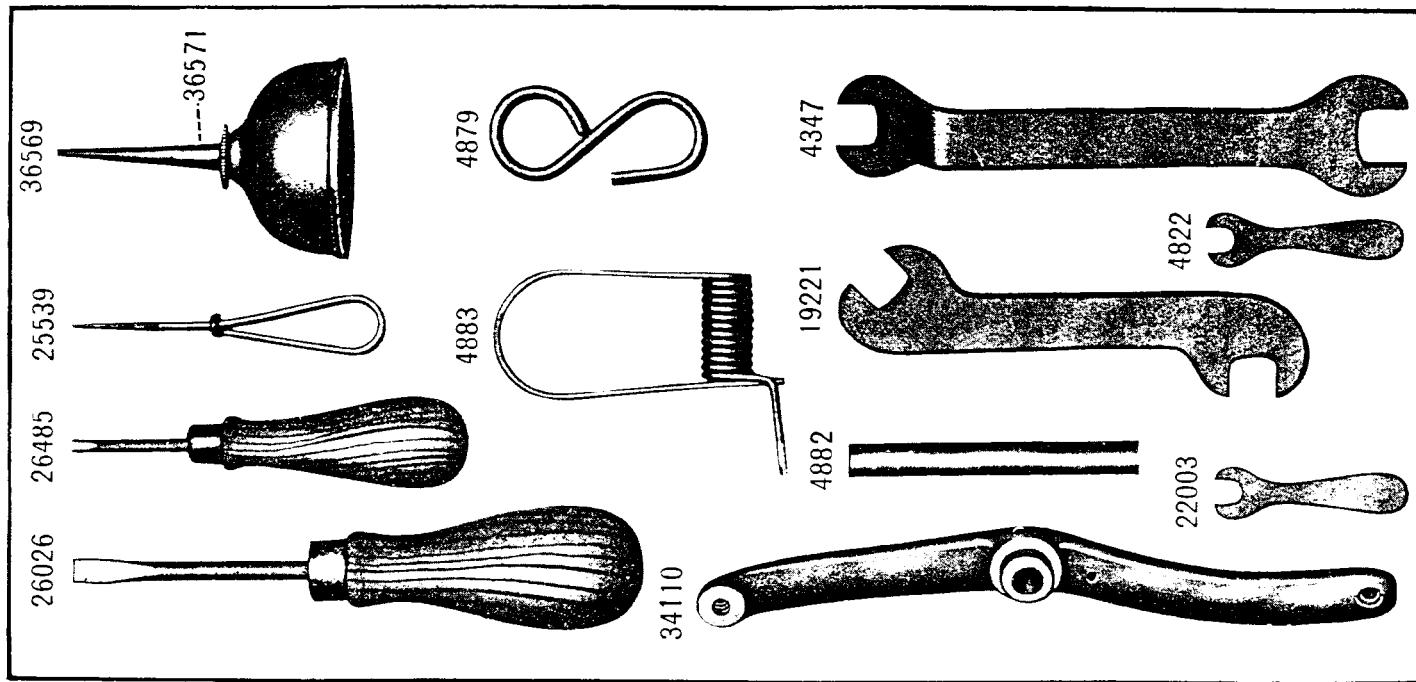


PLATE 4237—FULL SIZE

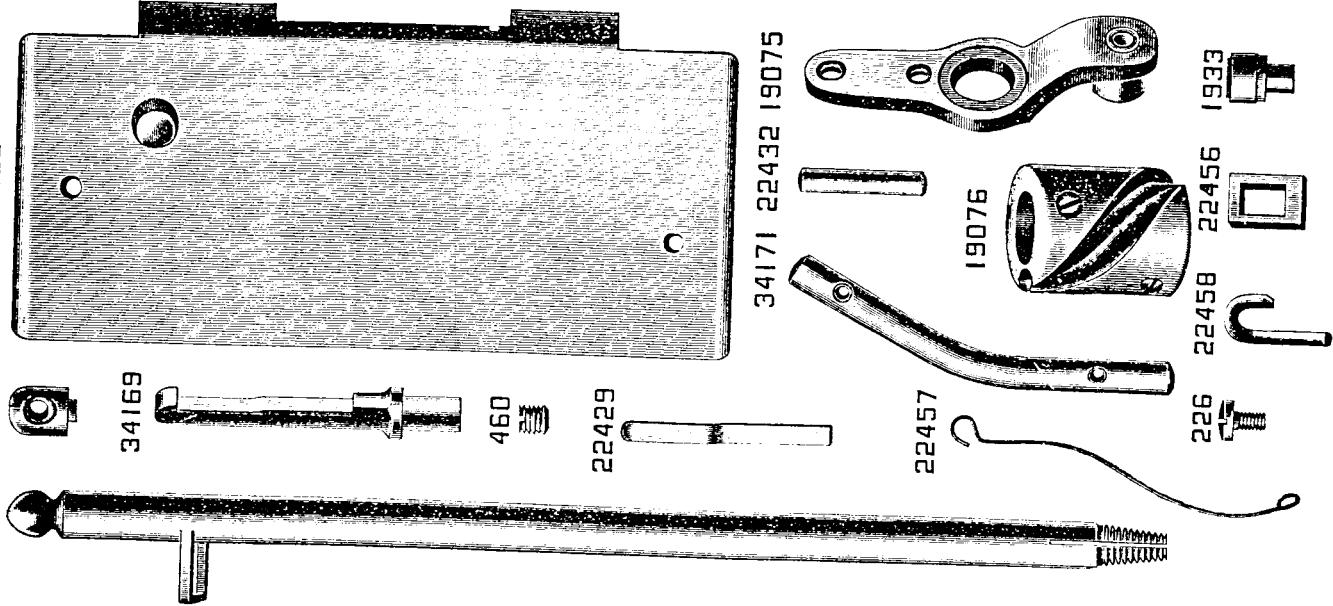


PLATE 4246—ONE-HALF SIZE

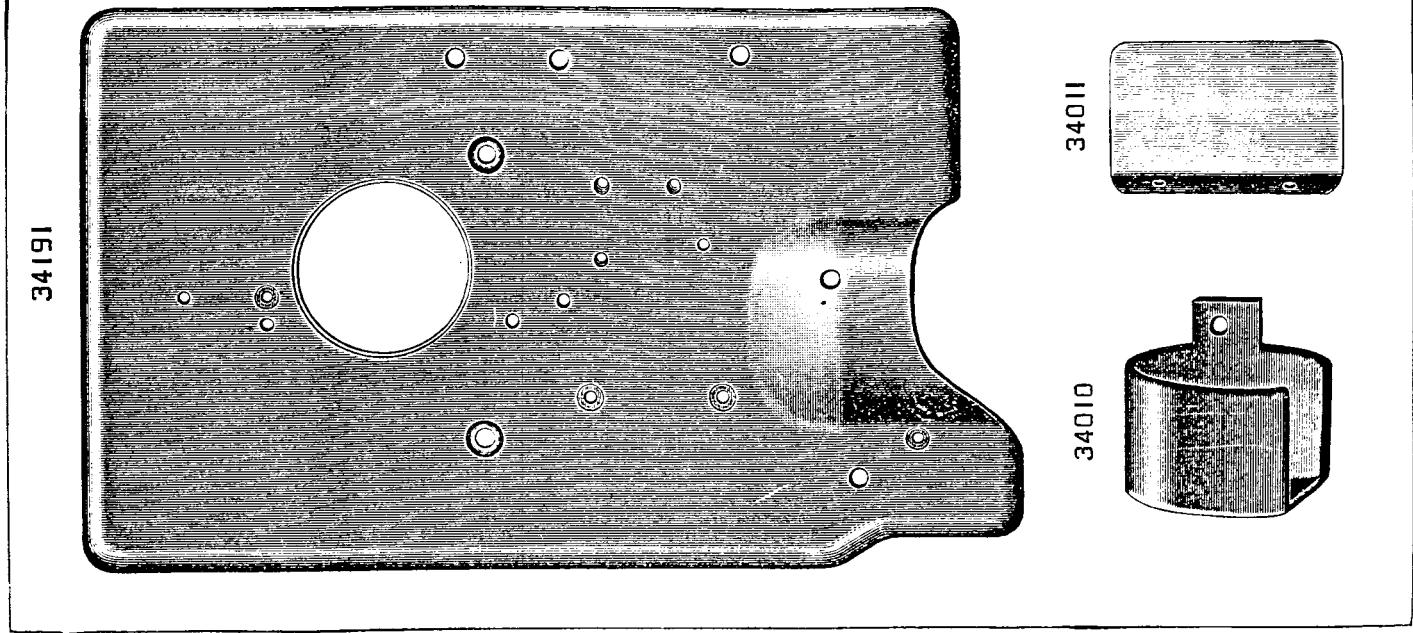


PLATE 4248—FULL SIZE

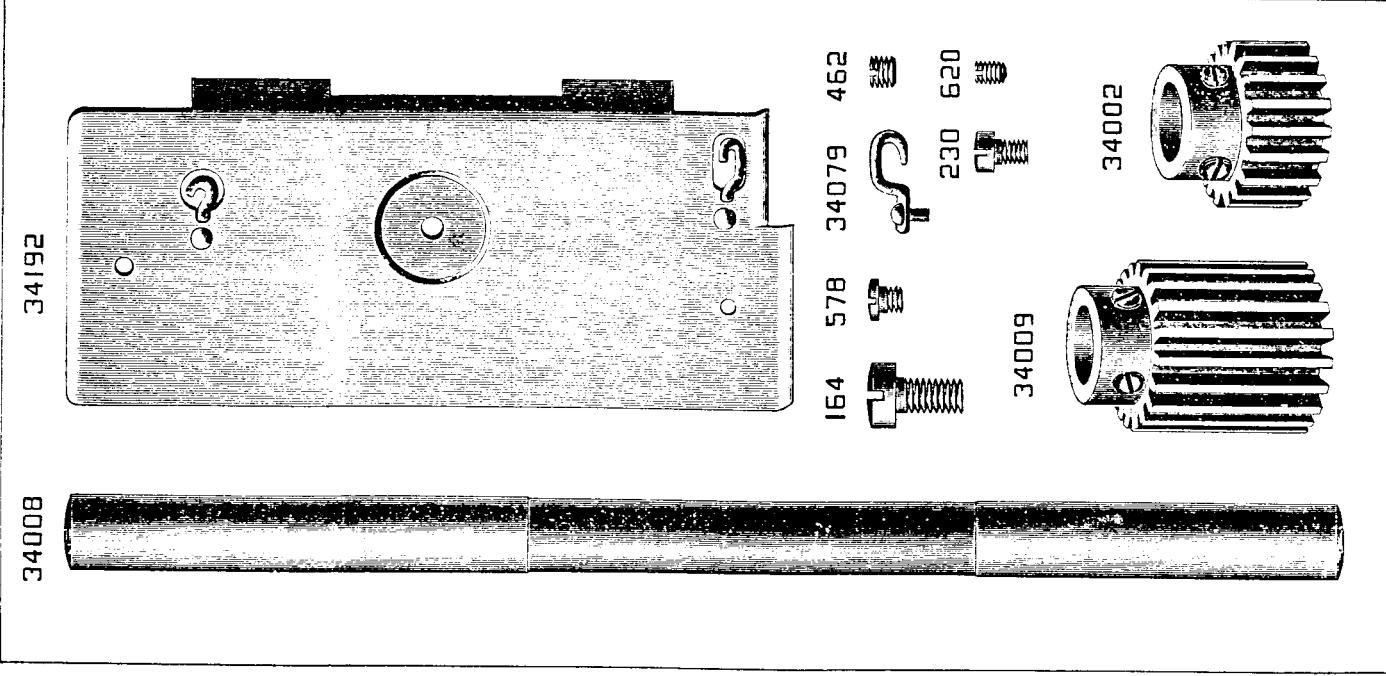


PLATE 6855—FULL SIZE

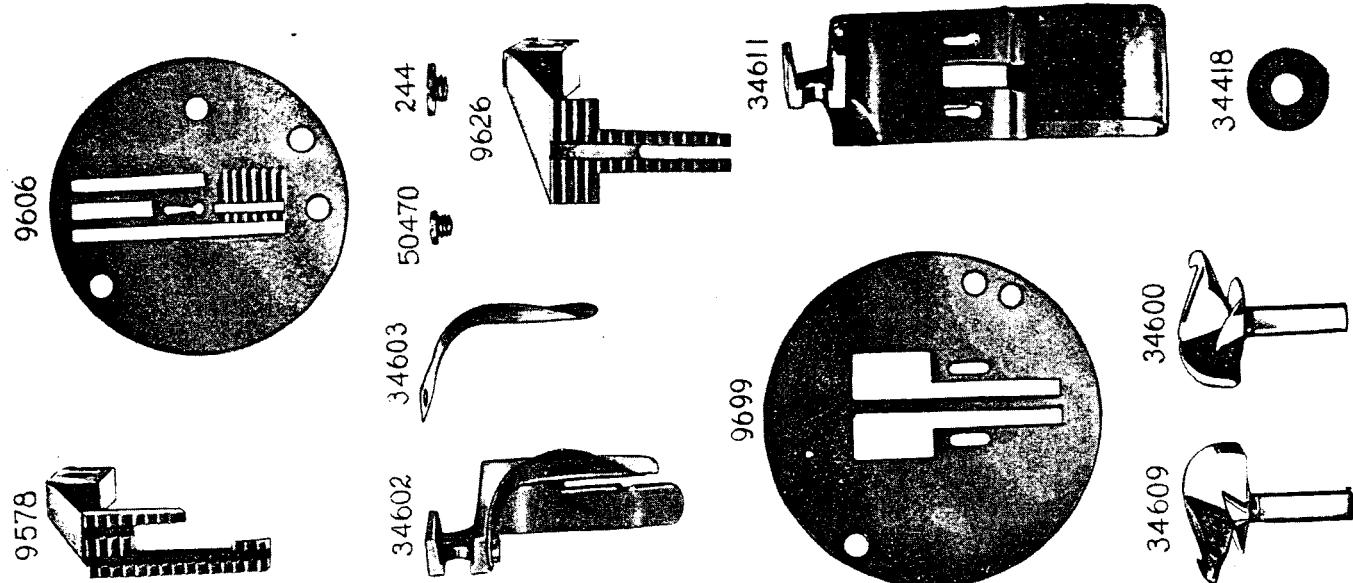


PLATE 6856—FULL SIZE

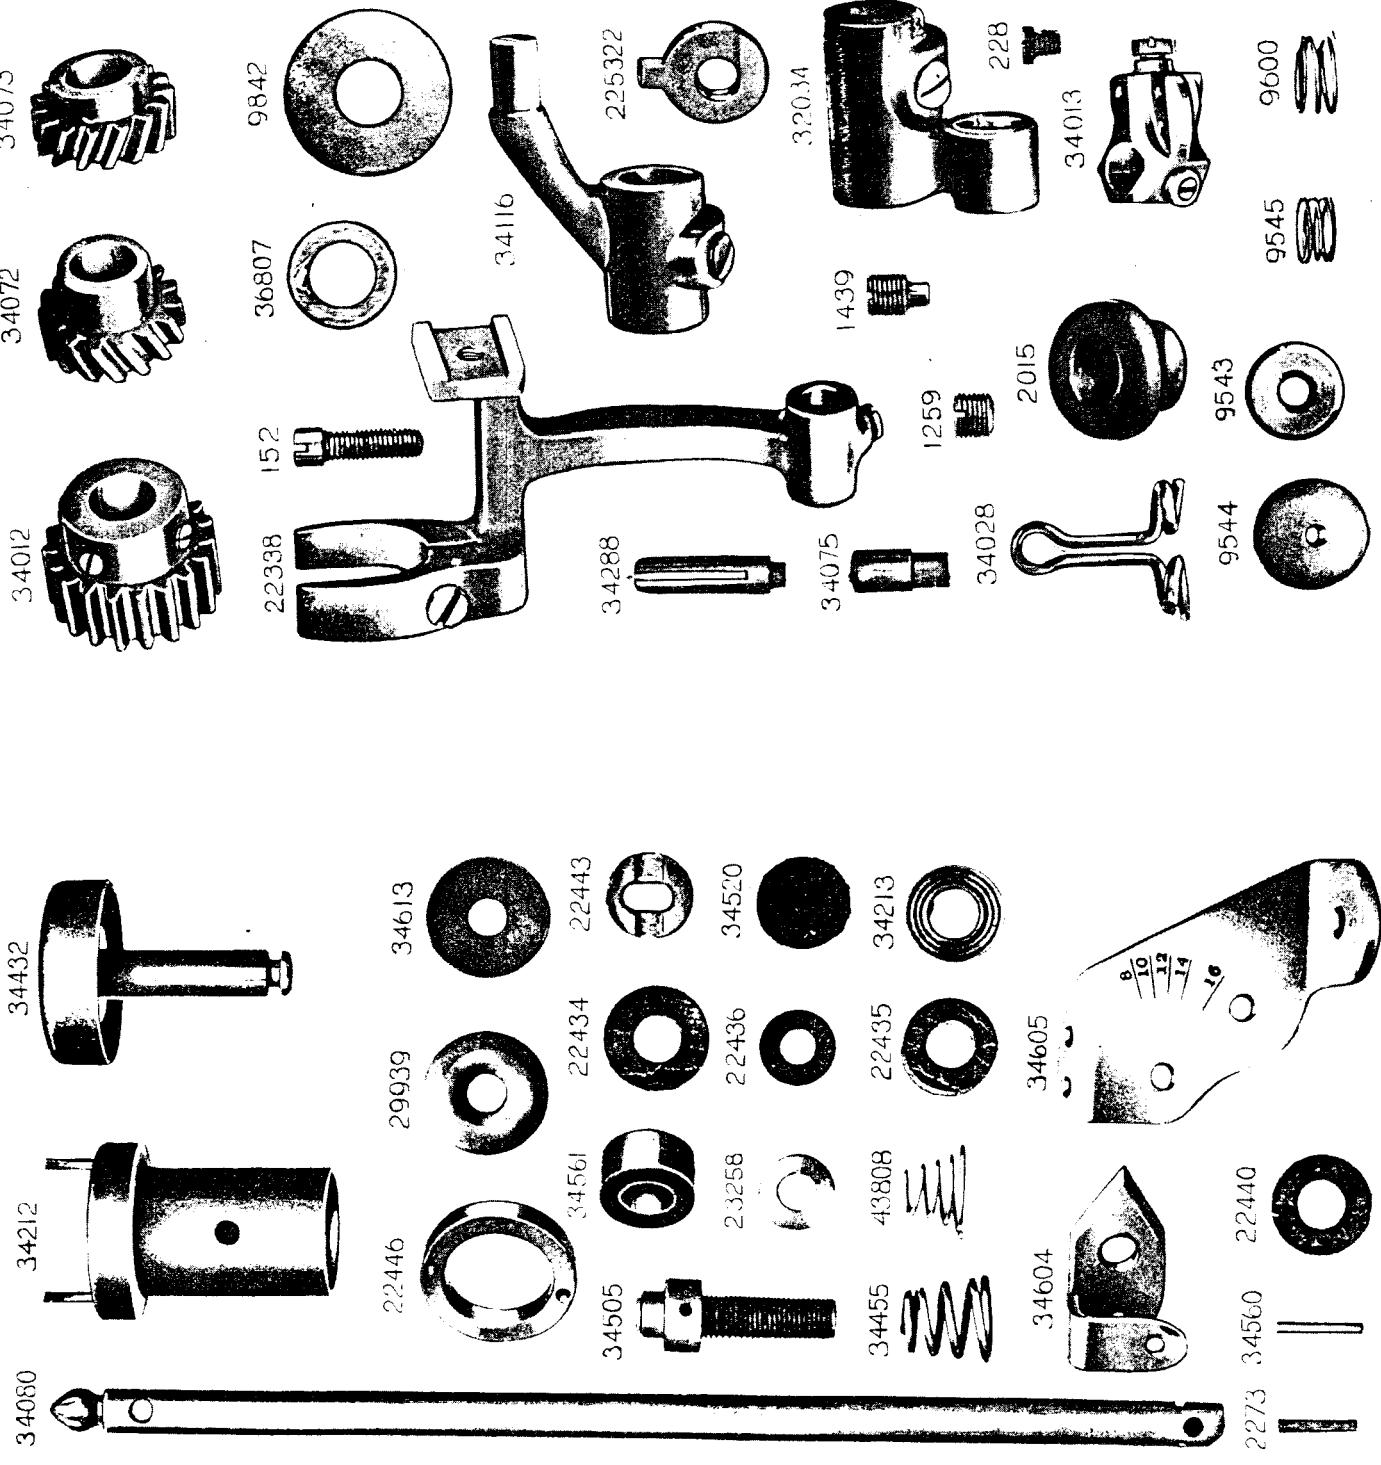


PLATE 6857—FULL SIZE

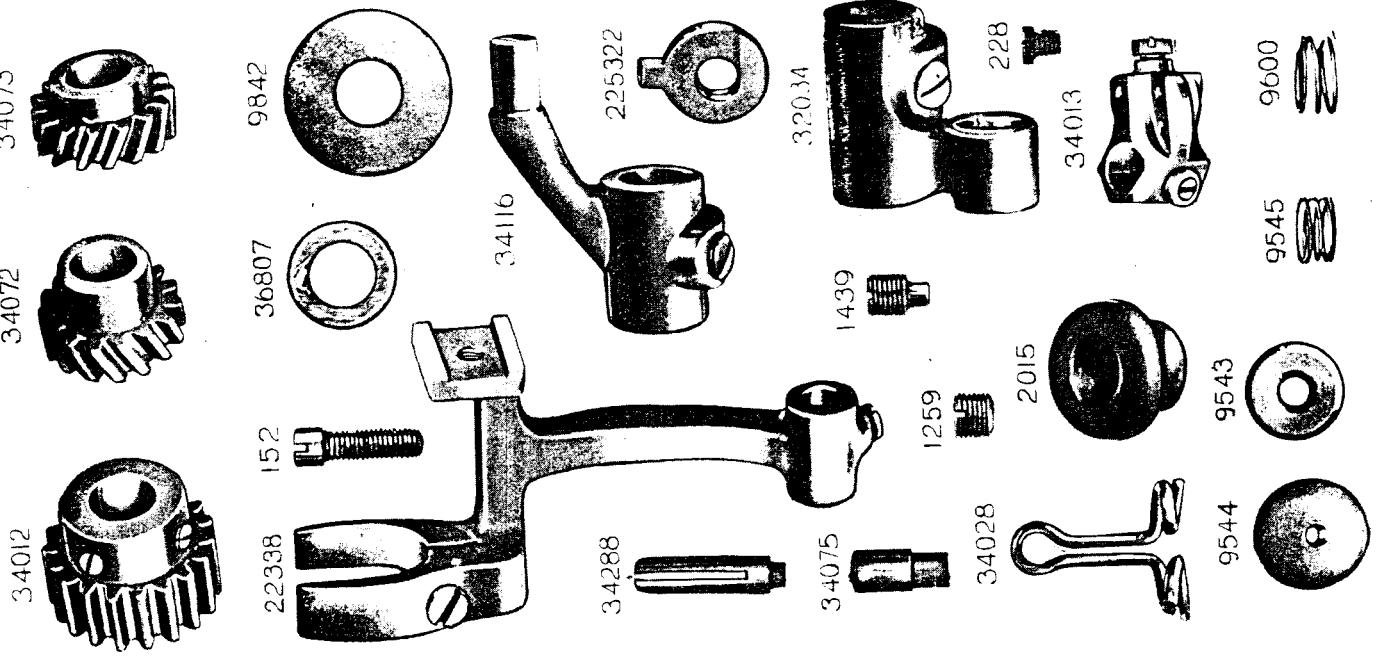


PLATE 6858—FULL SIZE


This technical drawing illustrates several mechanical components, each accompanied by its part number:

- 26059: A coiled spring.
- 56864: A U-shaped metal hook.
- 418: A threaded bolt or screw.
- 56865: A U-shaped metal hook.
- 9640: A cylindrical metal component.
- 2827: A small metal hook or fastener.
- 8505: A small metal hook or fastener.
- 19079: An adjustable wrench.
- 1620: A lock washer.
- 34111: A long cylindrical metal component with a central slot.
- 19081: A coiled spring and a metal hook.
- 34030: A cylindrical component with a circular end featuring a crossed-circle symbol.
- 34187: A cylindrical metal component.
- 34189: A cylindrical metal component.
- 1170: A small cylindrical component.
- 1520: A lock washer.
- 1602: A lock washer.
- 1521: A lock washer.
- 1735: A lock washer.
- 201696: A cylindrical metal component.
- 26058: A cylindrical metal component.
- 1562: A lock washer.
- 1754: A lock washer.
- 1541: A cylindrical metal component.

PLATE 6859—FULL SIZE

130		219	
659		399	
21		1008	
21		145	
1327		190	
185		104	
45		1009	
1139		356	
791		199	
84		1125	
201018		50137	
20038		766	
1264		337	
240			

PLATE 6860—ONE-HALF SIZE




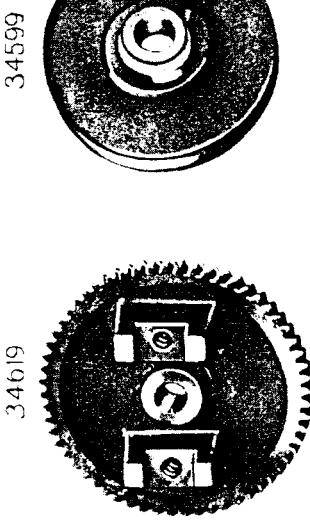


34608

9566

34311

22449

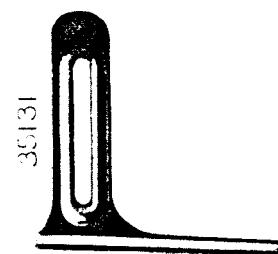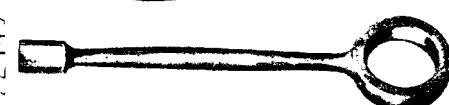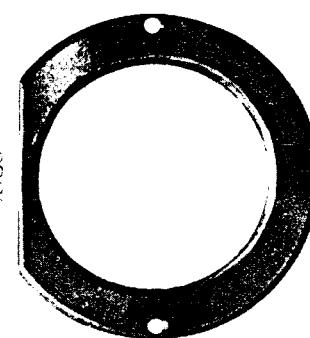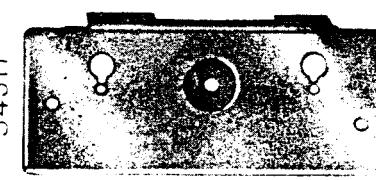

34287

PLATE 6861—ONE-HALF SIZE

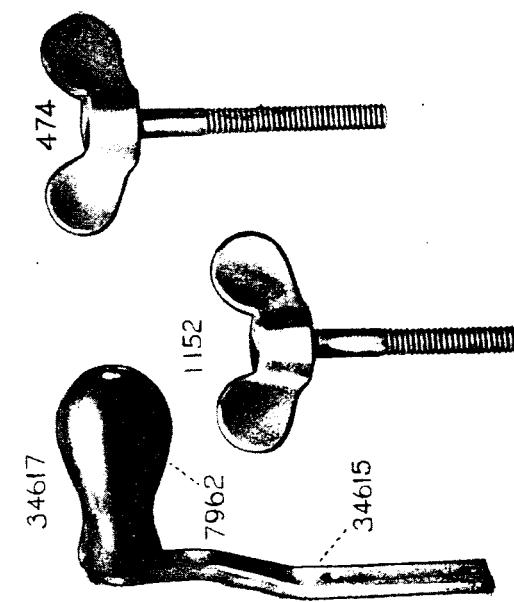
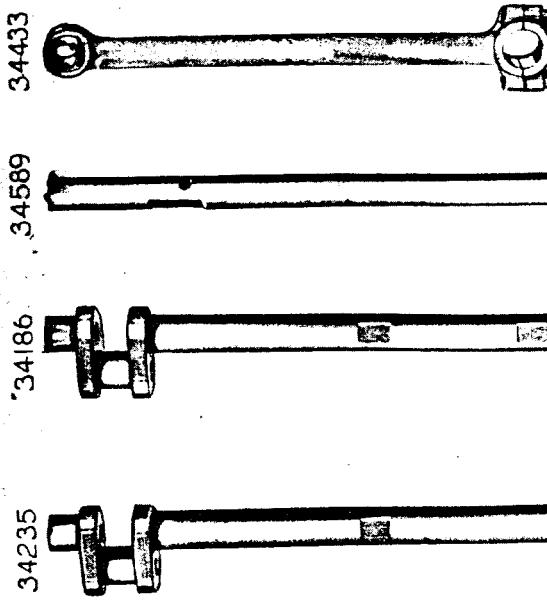


PLATE 6862—ONE-HALF SIZE

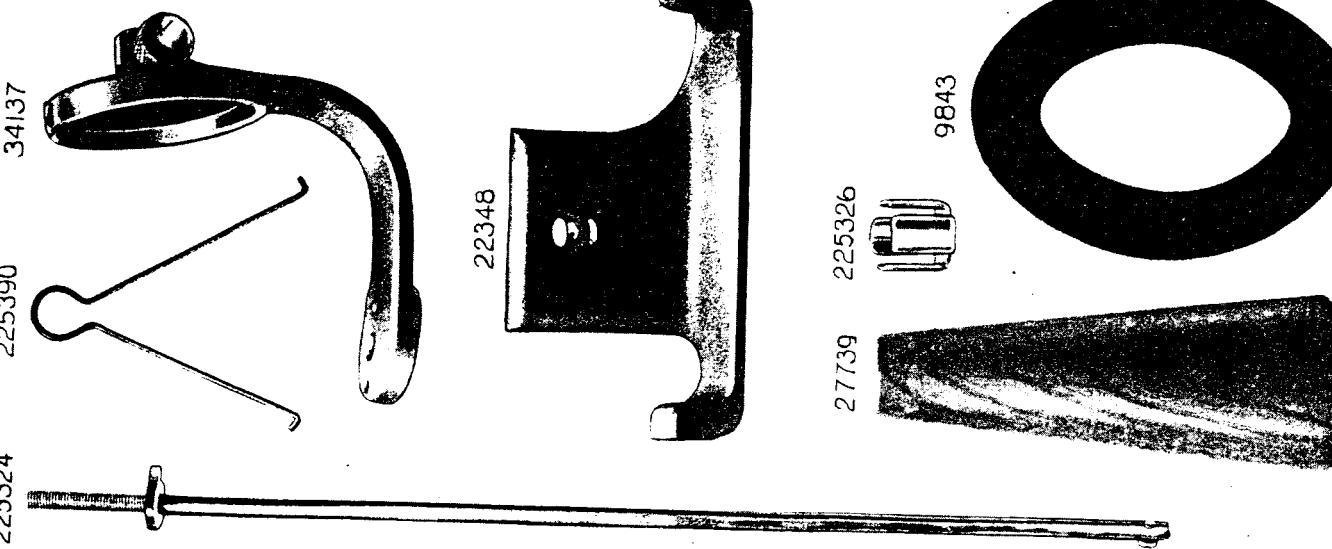


PLATE 6863—ONE-HALF SIZE

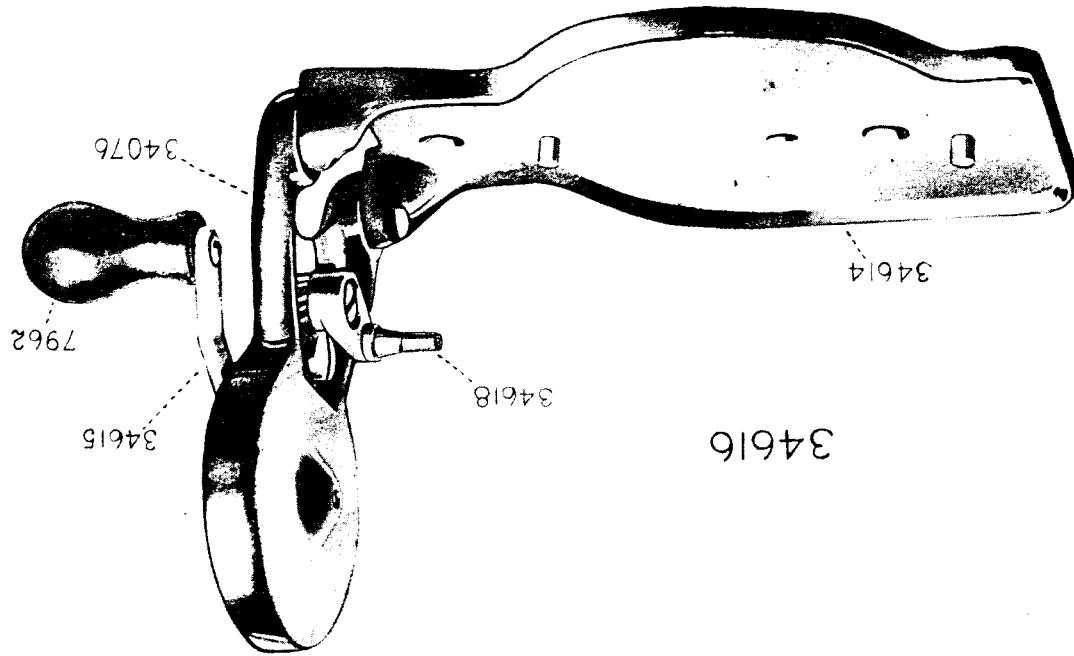


PLATE 6864—FULL SIZE

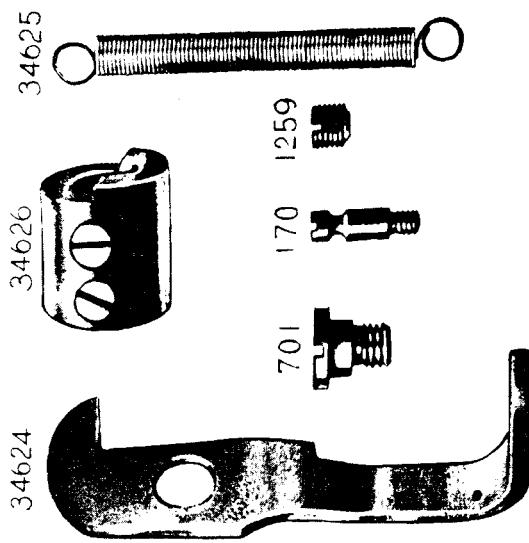


PLATE 7233—ONE-FOURTH SIZE

