


HIGH SPEED INDUSTRIAL SEWING MACHINE

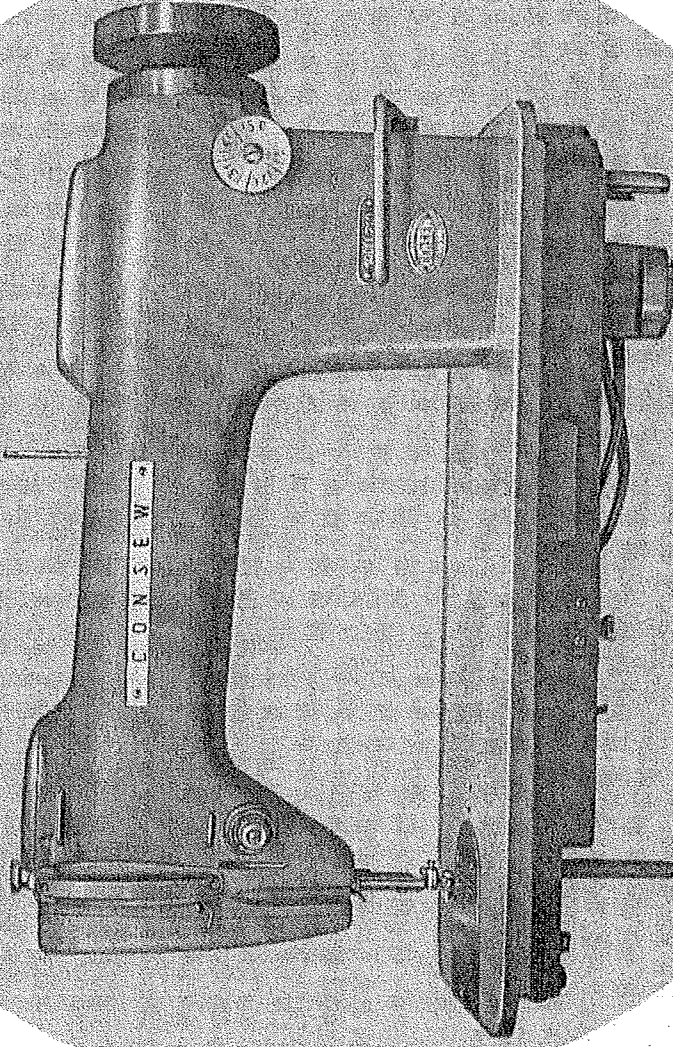

USER'S
**HAND
BOOK**

CONSEW
MODEL 210

Single-Needle Lock Stitch with
fully automatic Lubrication

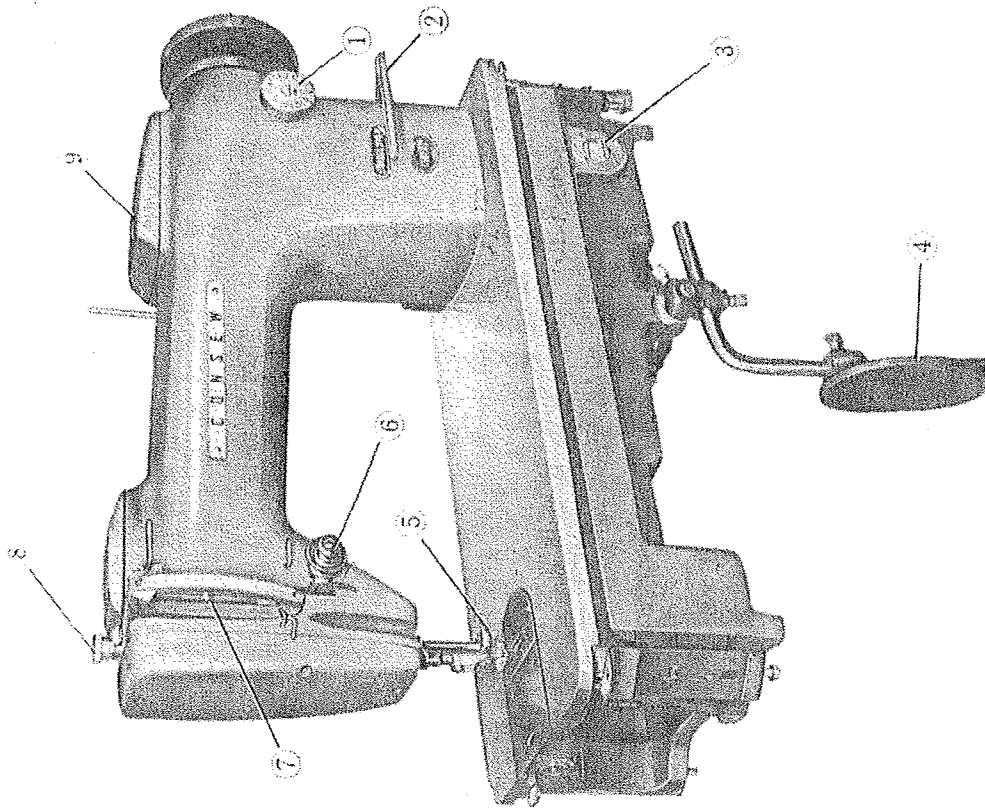


Fig. 1

Description :

1. Stitch Regulator
2. Tacking Lever
3. Oil level Indicator
4. Knee Lifter Lever
5. Needle Clamp
6. Tension Regulator (upper thread)
7. Thread Take-up lever
8. Pressure Regulator
9. Oil Feed Window

CHARACTERISTI

1. The CONSEW Model 210 machine for sewing light, medium, and heavy-weight material is all-gear driven and automatically lubricated at every bearing with separately adjustable oil feed for the rotary hook. All bearings are diamond bored sleeve types, except for needle bearings at the thread take-up.
2. Drop Feed design with a maximum stitch length 6 to the inch.
3. The belt groove in the machine handwheel has an effective diameter of $2\frac{3}{16}$ " when using $\frac{3}{8}$ " wide "V" belting. For $\frac{5}{16}$ " dia round belting the effective diameter is $2\frac{3}{8}$ ".
4. Maximum presser Foot lift is $\frac{3}{8}$ ".
5. Needle style 16×257 (all sizes)

IMPORTANT NOTE :

Do not operate machine for any reason whatsoever unless oil reservoir has been filled and machine has been oiled according to instructions on page 5.

Maximum operating speed is 4,500 stitches per minute

How to set up

For purposes of shipment the machine and its oil pan are separated. Unpack machine with great care to prevent loss of any assembly part and to prevent the entry of foreign matter into the head and the oil pan. Attach to oil pan corners the four Z-shaped straps using two shoulder screws each. Loosen adjustment screws at bottom of straps until there is clearance between screw heads and rubber pads at underside of oil pan. (Fig. 2)

The pan fits a standard size table cut-out, (19" x 7 $\frac{1}{4}$ ") and is supported at the four corners without screws or bolts. The weight of the head alone suffices for accurate seating. Note that the oil pan must settle down easily into the cut-out without use of force. If necessary rasp the edges of the cut-out and those of the corner supports.

No felt pads are required on top of these corner supports. They should be removed, if the machine is to be installed into an old table. To level the oil pan within the table cut-out, put machine head in place, having inserted the hinge hooks into the bed beforehand. With the machine head resting on the neoprene rubber oil pan gasket, turn adjustment screws (Fig. 2) until top of machine bed projects evenly above the surface of the table top. The machine hinges must not support the head except when it is tilted back.

Insert plunger "P" into its seat inside the oil pan (Fig. 3) and assemble knee lifter lever and pad to its component parts at the front of the oil pan. Adjust stops of knee lifter mechanism so that there is only a little play before it starts to lift the presser foot and that it is raised all the way without any strain on the lifter parts and without tendency to lift the entire head.

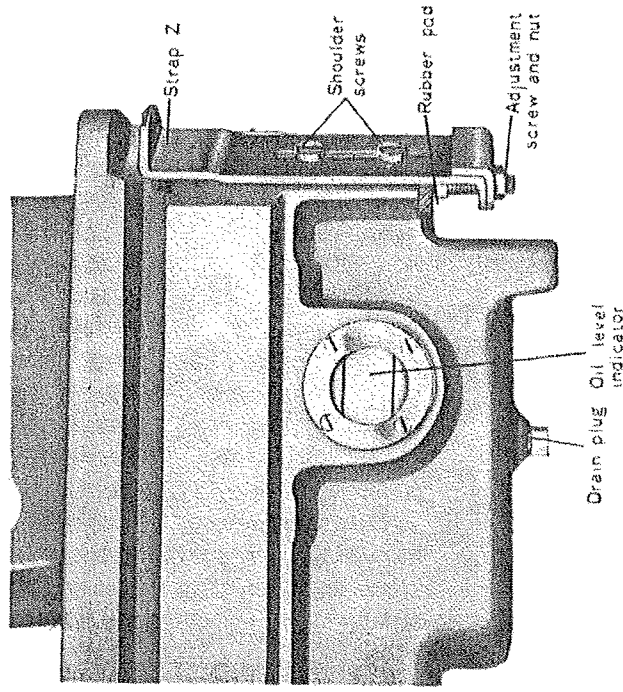


Fig. 2

The Lubrication System

Oiling of the operating parts of Model 210 machine is entirely automatic. Oil is contained in the oil pan at the bottom of the machine head and is circulated from there to all parts which require lubrication and cooling. The oil pan should be filled with good quality sewing machine oil, either ordinary or stainless type, of a grade similar to SAE10, to the level indicated by the word "High" inside the pan. The upper red line of the oil level indicator (2), (Fig. 1) shows the corresponding oil level. Check oil level daily and never allow it to fall below the lower red line of the oil level indicator or below the "low" mark inside the oil pan. Oil is filled directly into the oil pan when the head is tilted back. Total oil capacity is approximately $1\frac{1}{2}$ pints (24 fl. ounces.)

To remove accumulated impurities from the lubricating oil, a magnet has been included with the machine. Remove it from the accessory box and place it along the circular flat rim at the bottom of the oil pump (see Fig. 3). At this location, the largest flow of oil passes the magnet with most efficient cleaning as a result.

NOTE: Before operating a new machine or one which has been standing idle for a period of several weeks, remove the arm cover plate right next to the pressure regulator (7). Soak with oil the four oil wicks now exposed and replace cover. After a few minutes of operation the automatic oiling system will do the lubricating.

The oil supply for the rotating hook can be controlled through adjustment of the needle valve "V" at the underside of the machine bed (Fig. 3). While this valve is adjusted at the factory to feed the correct amount of lubricant, operating conditions may require either an increase or a decrease in the oil flow to the hook. To determine the amount of oil supplied to the hook, hold a piece of tissue or similar paper under the hook and operate machine. After a very brief period of operation a slight trace of oil should become visible on the paper. If not, check flow and adjustment of needle valve. Also, remove from oil screen "S" at bottom of oil pump "O" any accumulation of lint or other foreign matter, at the same time lift the magnet from the rim of the oil pump, wipe it clean and replace it.

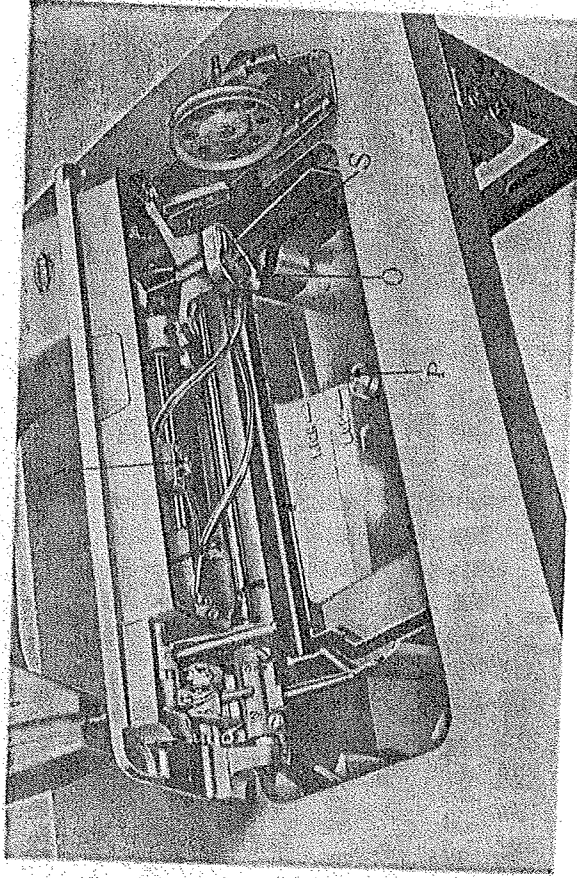


Fig. 3

Threading the machine

Turn handwheel toward you until needle (10) reaches its highest point and take-up lever (7) is near the end of its upward travel, as shown on Fig. 4. Lead thread from hole of spool pin (1) through three holes in thread guide (2), then downward through guard (3) and between and around tension discs (4) from right to left. Upward into thread take-up spring (5) and down under slack thread regulator (6), up and through guard (3) into eye of take-up lever (7) from right to left, down through thread guides (8 and 9) into thread guide (10) and from left to right through the eye of the needle. Pull two to three inches of thread through the eye of the needle.

Removal of bobbin case

Turn handwheel toward you until needle reaches its highest point. Open slide plate by pulling it to the left. Pass left hand under table into opening on oil pan. With left thumb and index finger open the hinged latch (L) (Fig. 5) at the front of the bobbin case. Grasp latch and pull bobbin case and bobbin from rotary hook. While the latch is held open, the bobbin will be retained in the bobbin case. Release of the latch and turning of the open side of the bobbin case downward will cause the bobbin to drop out.

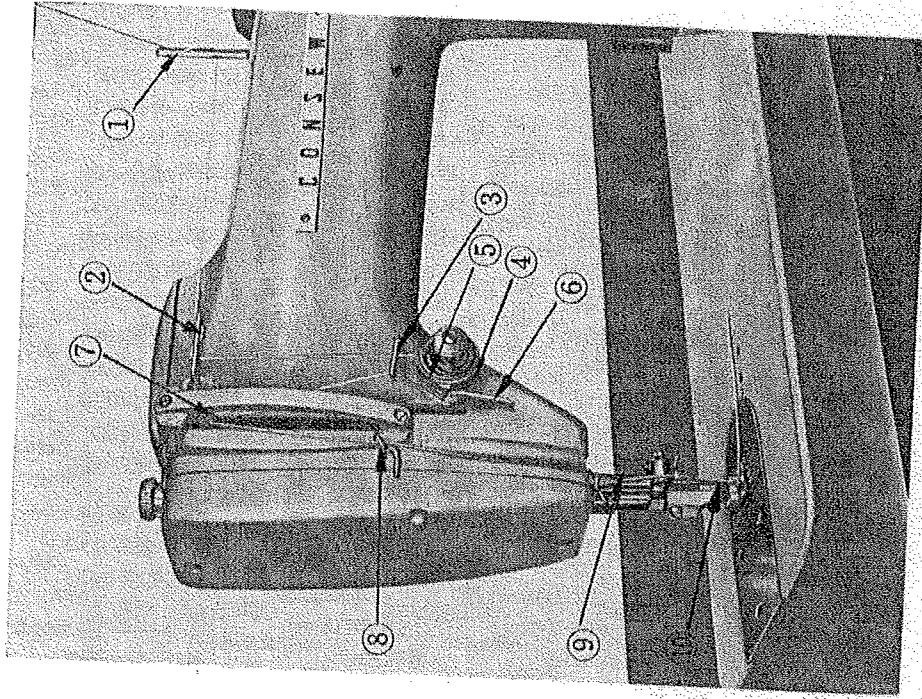


Fig. 4

Threading and Inserting the Bobbin Case

Hold the bobbin between the thumb and forefinger of your right hand and pull out a length of two or three inches of thread. Holding the bobbin case in your left hand, turn the open side up and place the threaded bobbin into it.

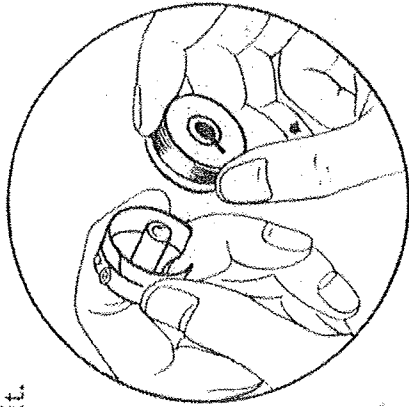


Fig. 5-1

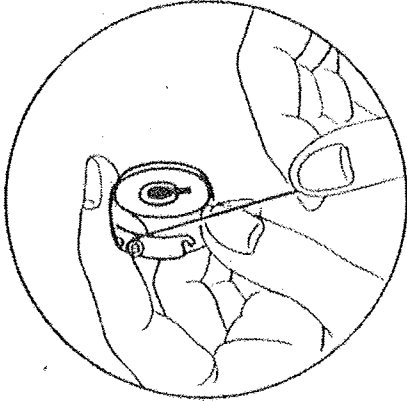


Fig. 5-2

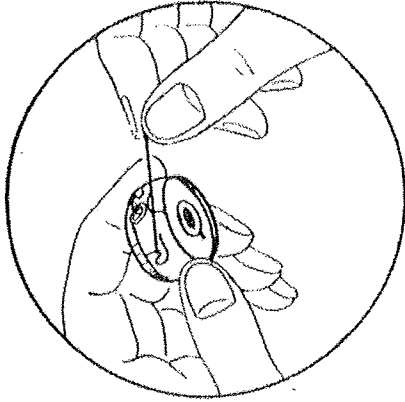


Fig. 5-3

With the right hand guide the thread into the slot in the edge of the bobbin case. Then pull the thread to the left, under the tension spring and into the delivery eye. In order to keep the bobbin from dropping out of the case when it is turned with the open side down, always keep the hinged latch at the front of the bobbin case open.

Take the threaded bobbin case by the latch and place it on the center stud A (Fig. 6) of the bobbin case holder. Release latch and press bobbin case onto center stud until the latch catches the undercut thereon with a click that can be heard. Permit two to three inches of bobbin thread to hang down freely. Be sure to push slide plate to the right before starting to sew.

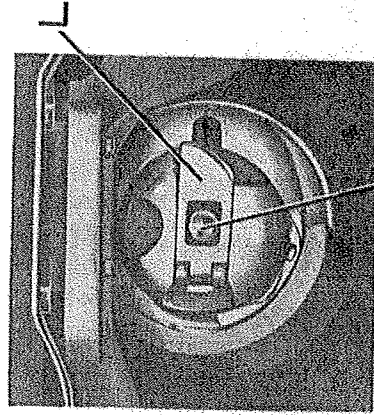


Fig. 6

Inserting a New Needle

Turn handwheel of machine toward you until needle bar reaches its highest point. Loosen set screw in needle clamp at bottom end of needle bar and push needle up into bar as far as it will go. Long groove in needle must face toward the left and the eye must be in line with the arm of the machine. Tighten needle set screw securely.

To Commence Sewing

Turn the balance wheel toward you with the right hand until the needle moves down and up again to its highest point, thus catching the lower (bobbin) thread. Now pull the end of the upper thread you are holding and the bobbin thread will be brought up with it through the needle hole in the needle plate, as shown in (Fig. 7). Place both ends of thread back under the presser foot. Place the fabric to be sewn beneath the presser foot, lower the foot upon it and then start the machine.

To Remove the Work

Raise the needle bar to its highest point, lift the presser foot and draw the fabric back and to the left. Cut the ends of the threads a few inches long from the needle.


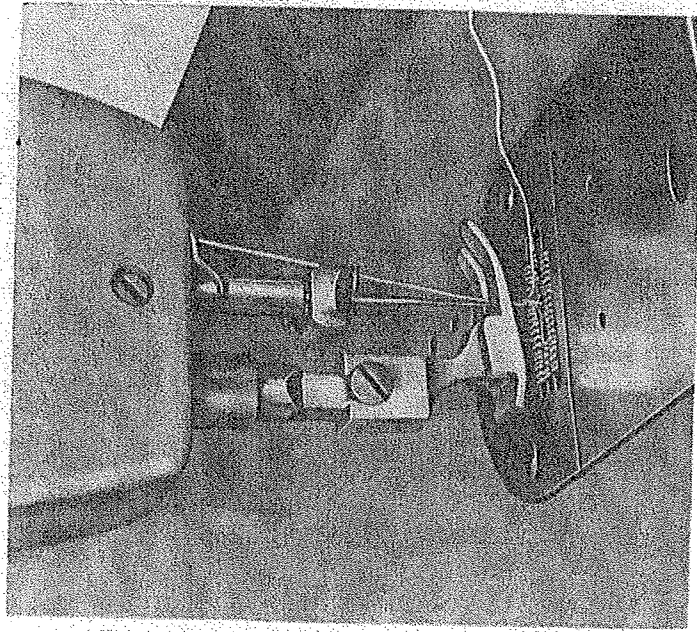


Fig. 7

To Regulate the Tensions

For ordinary stitching, the tension on the upper and lower threads should be equal so as to lock both threads in the center of the fabric,

Thus:

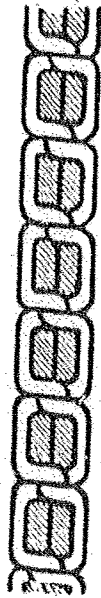

If the tension on either thread is stronger than on the other, imperfect stitching will be the result. If the tension on the upper thread is greater than that on the lower thread, it will lie straight along the upper surface of the fabric,

Thus:



If the tension on the lower thread is greater than that on the upper thread, the lower thread will lie straight along the underside of the fabric,

Thus:



A. Tension of the upper (N) thread

Before adjusting the tension of the upper thread, be certain that the presser foot is let down and not in lifted position. Turn serrated nut "N" on tension device to the right to increase tension and to the left, if you desire to decrease it.

B. Tension of the lower (bobbin) thread

The tension of the lower thread is regulated by the screw on the bobbin case tension spring (see Fig. 9).

Use the small driver to tighten the screw slightly to increase the tension, or loosen it to slacken the tension.

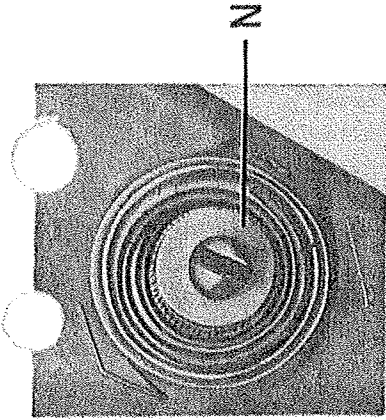


Fig. 8

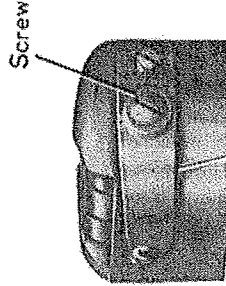


Fig. 9

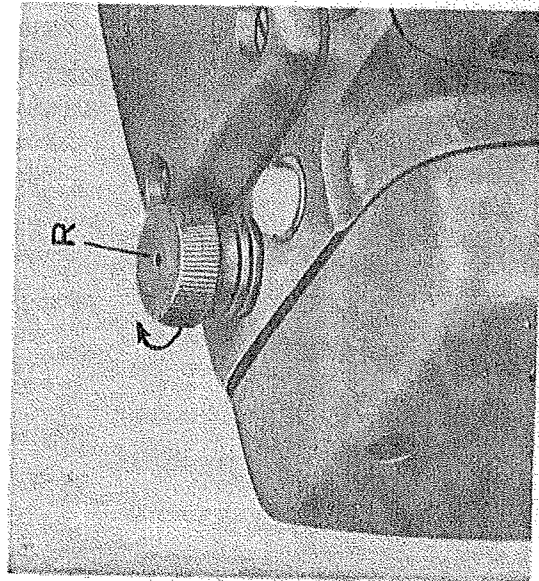


Fig. 10

To Regulate the Pressure of the Presser Foot

The pressure of the presser foot on the material is regulated by the Regulator Screw (R) (Fig. 10) on top of the machine. Turn this regulator to the left to decrease it. Do not employ more foot pressure than is required to feed the material properly.

How to Control the Length of Stitch and to do Tacking

The stitch length is regulated by turning dial (D) at the front of the machine (Fig. 11). When number "0" on dial appears uppermost, the machine does not feed. Turning dial counterclockwise will gradually increase the stitch length until the maximum is reached when number 5 is on top. As the stitch length is increased, it can be noticed that tacking lever (T) slowly moves in upward direction.

When shortening the stitch length, it will be found of advantage to depress lever (T) slightly as dial (D) is being turned clockwise. To do tacking for the purpose of locking the ends of seams, rapidly depress and release lever (T) as the needle approaches the edge of the material.

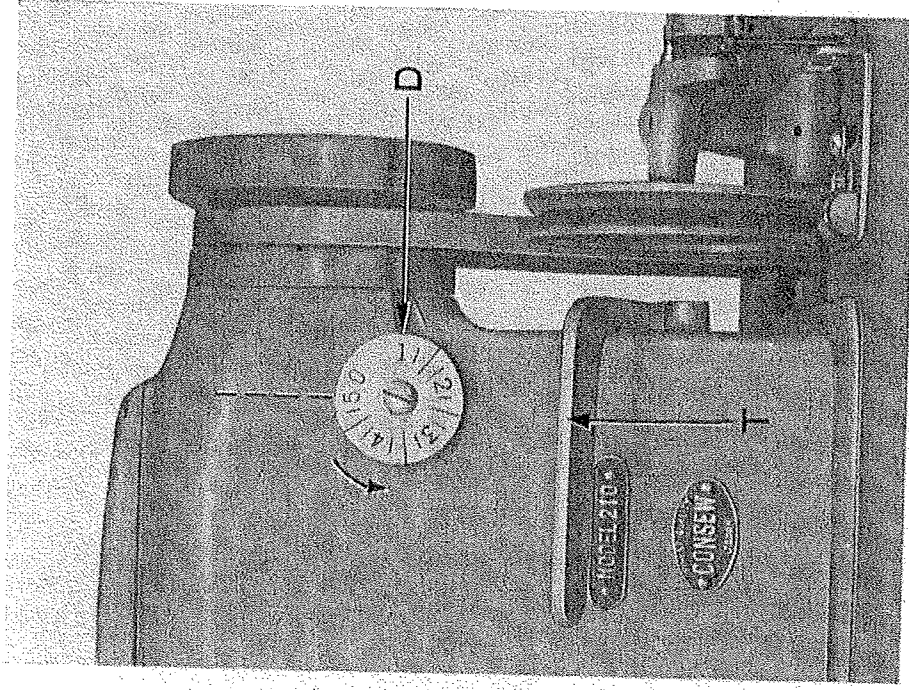


Fig. 11

The Bobbin Winder

The bobbin winder is mounted on the table top with its pulley in front of the driving belt so that the pulley will separate from the belt after the bobbin has been wound with sufficient thread (Fig. 12).

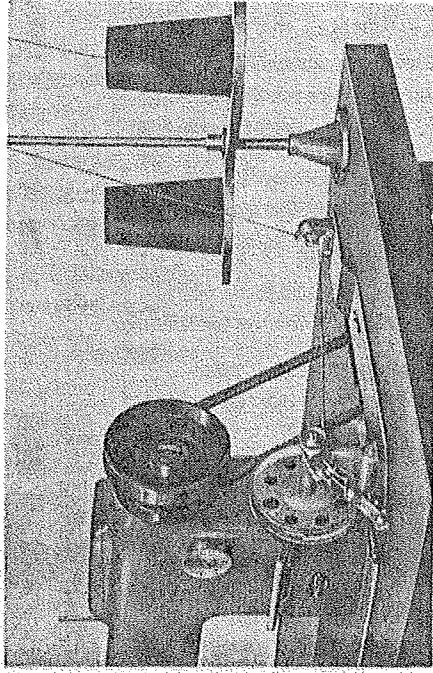


Fig. 12

1. Push bobbin on bobbin winder spindle as far as it will go.
2. Pass thread from thread stand downward through eye in tension bracket, then between and around the back of the tension discs. Bring thread forward toward bobbin and wind from below in clockwise direction several times around bobbin.
3. Push bobbin winder lever downward until wheel contacts the drive belt and start machine.
4. After bobbin is filled with thread, release wheel to disengage from belt and winding will stop. Cut thread and remove bobbin from bobbin winder spindle.
5. Adjustment screw can be turned in or out to increase or decrease the amount of thread wound on the bobbin.

When fine thread is wound on bobbins, use light tension. It is regulated by turning the knurled nut on the tension bracket at the rear of the bobbin winder. Bobbin can be wound while the machine is sewing.

Adjustment of the knee lifter

The knee lifter mechanism is assembled to the oil pan of the machine except that for shipping purposes lever (J) and knee pad (K) are disassembled. After the oil pan has been positioned in the table top and the head set in place and locked to the oil pan, insert lever and knee pad as shown in Fig. 13. Tighten their respective set screws when in most comfortable position for the operator. While lever (J) is shown inserted from the left, it can also be inserted from the right whenever more knee space is desired. Set stops of knee lifter mechanism so that there is only little play before it starts to lift the presser foot and to allow raising of the presser foot all the way but not beyond the maximum. This will avoid any possible strain on the lifter mechanism and the related parts of the head itself.

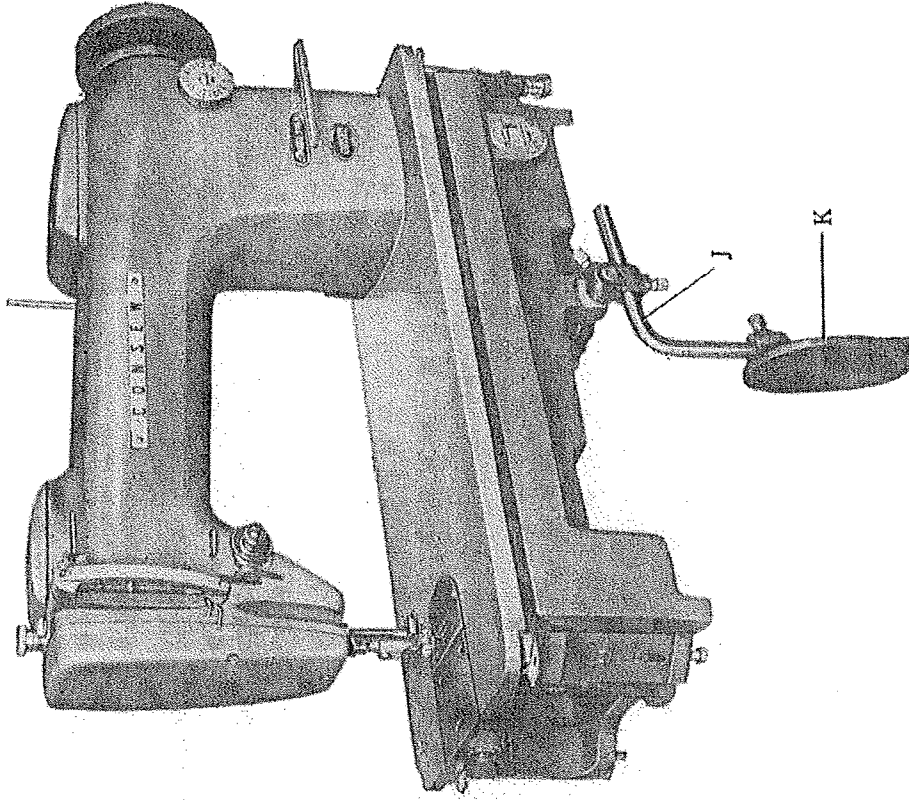


Fig. 13

ADJUSTMENT OF TENSION RELEASE

The machine is normally adjusted at the factory so that the tension of the upper thread will be released when the presser foot is raised in excess of 17/64". If it is desired to effect thread tension release with a lesser lift such as when sewing very thin materials, this adjustment can be made by the user.

To change the timing of the thread tension release, proceed as follows :

1. Remove face plate from machine making sure that its gasket will not be damaged under any circumstances.
2. Do not wipe blue-colored sealing compound from the gasket nor from any of the contact surfaces of the face plate and the arm.
3. Loosen screw A (Fig. 14) to adjust regulating arm B. Set the height of arm B so that there will be upper thread tension when the presser foot is lifted for tacking. The upper thread tension must be completely released only when the presser foot is in fully raised position.
4. Tighten screw A securely and replace face plate making certain that all its screws are tightened uniformly.


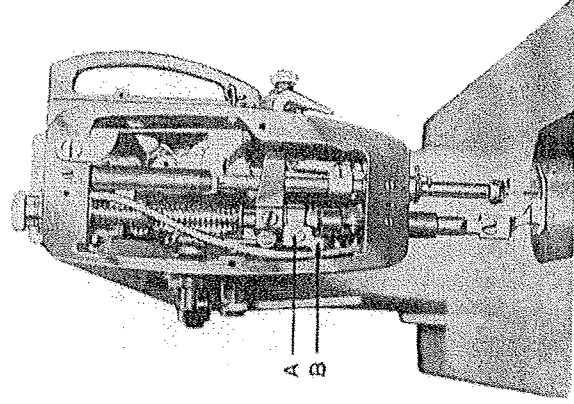


Fig. 14


NEEDLE AND THREAD CHART

Sizes of Needles	Classes of Work	Sizes of Cotton, Linen or Silk
14	Shirtings, Sheetings, Calicoes, Muslins, Silks, Dress Goods and all classes of general work	60 or 80 Cotton A and B Silk
16 & 17	All kinds of Heavy Calicoes, Light Woolen Goods, Heavy Silk, Seaming, Stitching etc.	40 to 60 Cotton C Silk
18	Tickings, Upholstery, Woolen Goods, Trousers, Boys' Clothing. Cloaks, etc.	30 to 40 Cotton D Silk
19	Heavy Woolens, Tickings, Bags, Heavy Coats, Trousers and Heavy Clothing generally	24 to 30 Cotton E Silk 60 to 80 Linen
21	Bags, Coarse Cloths & Heavy Goods	16 to 20 Cotton 40 to 60 Linen


CONSEW MODEL 210, 210A & 210B

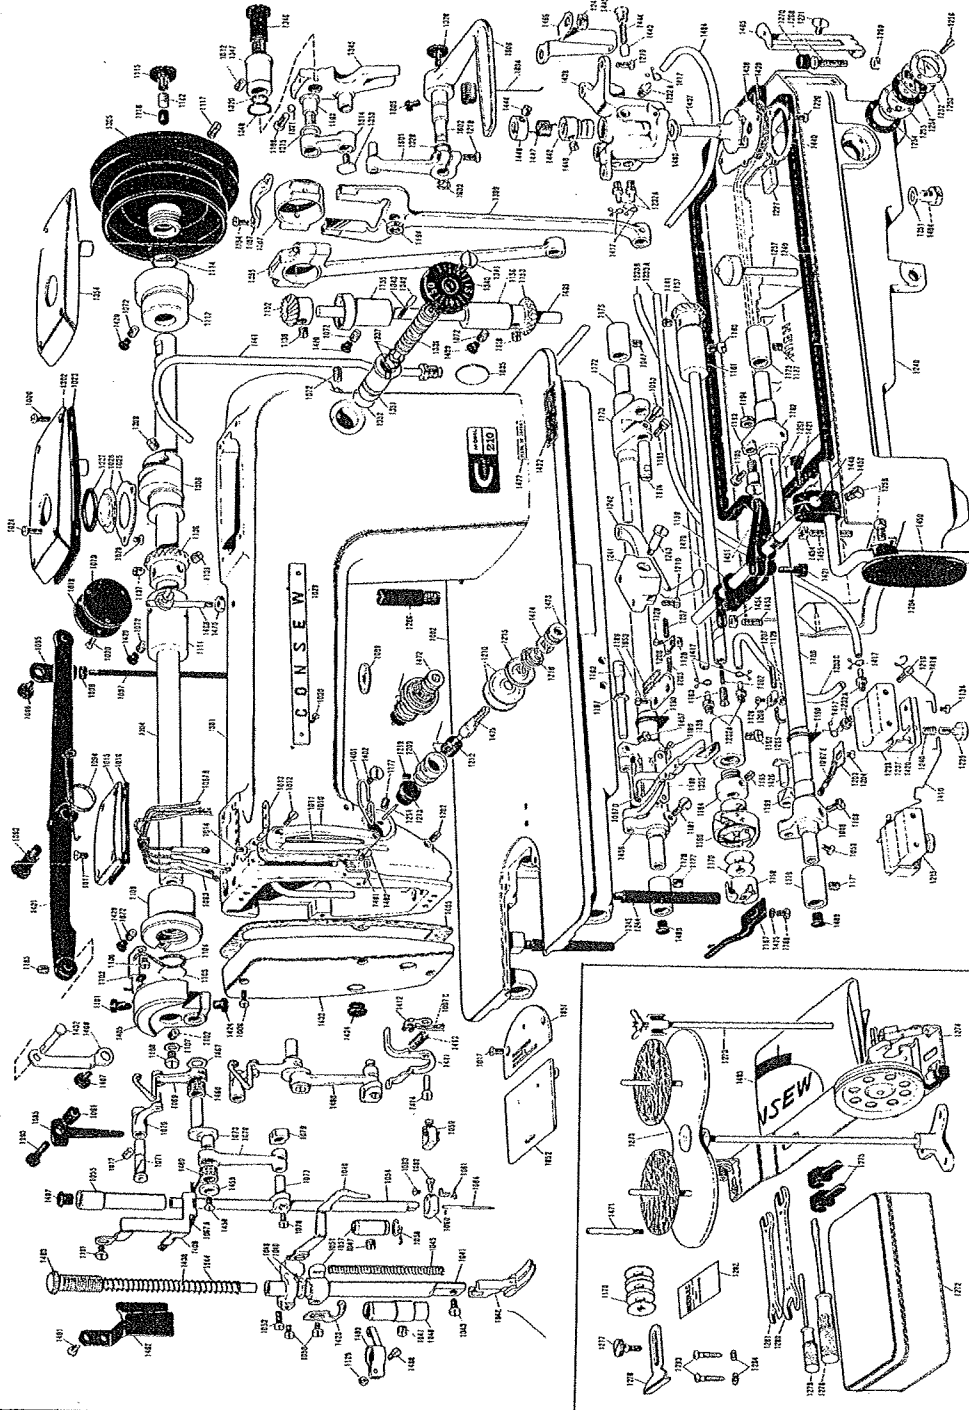

PARTS TO BE USED FOR MODEL 210A ONLY

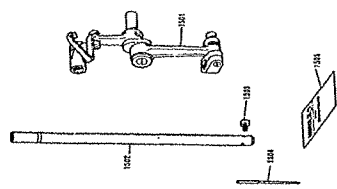

PARTS TO BE USED FOR MODEL 210B ONLY

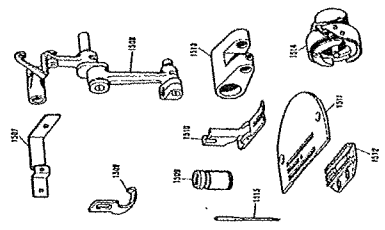

CONSEW MODEL 210, 210A & 210B

PART NO.	PART NAME	PART NO.	PART NAME	PART NO.	PART NAME	PART NO.	PART NAME
1002	RED ONLY	1102	SET SCREW FOR 1469	1213	PACKING FOR 1474	1356	FEED REGULATOR DIAL SHAFT
1006	GASKET FOR 1433	1103	RETAINER PLATE FOR 1104	1214	TENSION RELEASE PIN	1462	OIL STOPPER
1010	GUARD FOR TAKE UP LEVER	1104	OIL WICK FOR 1460	1215	TENSION RELEASE WASHER	1463	PRESSURE REGULATOR SCREW
1011	GASKET FOR 1010	1105	SPRING FOR 1104	1216	TENSION SPRING	1464	DRAIN PLUG
1013	THREAD GUIDE WITH THREE HOLES	1106	TOP SHAFT FRONT PACKING	1218	SET SCREW FOR 1475	1465	OIL PAN SUPPORT
1014	SET SCREW FOR 1013	1107	SCREW FOR OIL PUMP	1219	SCREW FOR OIL PUMP	1466	BED LEG. RIGHT
1015	COVER PLATE FOR OIL WELL	1108	TOP SHAFT FRONT BUSHING	1220	MAGNET FOR 1440	1467	THRUST WASHER FOR 1480
1016	GASKET FOR 1015	1109	TOP SHAFT CENTER BUSHING	1221	TOP SHAFT CENTER BUSHING	1468	KNEE LIFTER PLATE
1017	SCREW FOR 1015	1110	TOP SHAFT REAR BUSHING	1222	OIL HOSE 'A'	1469	KNEE LIFTER COMPLETE
1019	GASKET FOR 1018	1111	PACKING FOR 1305	1223A	OIL HOSE 'B'	1470	NUT FOR 1469
1020	SCREW FOR 1018	1112	CAP SCREW FOR 1305	1223B	OIL HOSE 'C'	1471	SPOOL PIN
1022	GASKET FOR 1022	1113	TOP SHAFT OIL STOPPER	1223C	OIL HOSE 'C'	1472	TENSION ADJUSTING KNOB
1024	FRAME FOR 1025	1114	SCREW FOR 1305	1224	OIL REGULATOR COMPLETE	1473	RATCHET FOR 1473
1025	SCREW FOR 1025	1115	SCREW FOR 1305	1225	OIL REGULATOR COMPLETE	1474	TENSION STUD
1027	PACKING FOR 1025	1116	SCREW FOR 1305	1226	OIL REGULATOR COMPLETE	1475	TENSION STUD
1028	NAME PLATE	1117	SCREW FOR 1305	1227	OIL REGULATING VALVE	1476	KNEE LIFTER MARK
1029	SCREW FOR 1028	1118	SCREW FOR 1305	1228	SPRING FOR 1239	1477	TAKE UP LEVER CONTROLLER
1030	PLUG FOR BED HOLE	1119	TOP SHAFT GEAR	1229	FRACKET FOR 1242	1480	TAKE UP LEVER COMPLETE
1040	THRUST WASHER FOR 1041	1120	VERTICAL SHAFT UPPER GEAR	1230	KNEE LIFTER RELEASE LEVER	1481	THREAD GUIDE, LEFT
1042	HINGED COVER ONLY	1121	VERTICAL SHAFT LOWER GEAR	1231	BEZEL FRONT	1482	SET SCREW FOR 1481
1043	SCREW FOR 1042	1122	HOOK SHAFT	1232	BEZEL REAR	1483	LOWER CLAMP FOR 1484
1044	PRESSER SPRING OUTER	1123	HOOK SHAFT FRONT BUSHING	1233	FRAME FOR 1232	1484	MACHINE HEAD
1045	PRESSER SPRING INNER	1124	SET SCREW FOR 1159 & 1161	1234	PACKING FOR 1232	1485	RUBBER CAP FOR 1055
1046	BUSHING FOR 1044	1125	HOOK SHAFT REAR RUSHING	1235	OIL GAUGE COVER	1486	RUBBER CAP FOR 1055
1047	PRESSER FOR 1046 & 1057	1126	FELT FOR 1158	1236	SCREW FOR 1233	1487	RUBBER CAP FOR 1055
1048	PRESSER FOR 1046 & 1057	1127	SET SCREW FOR 1162	1237	KNEE LIFTER PLUNGER	1488	RUBBER CAP FOR 1055
1049	THREAD REGULATOR	1128	SCREW FOR 1162	1238	SCREW FOR 1162	1489	RUBBER CAP FOR 1055
1050	SCREW FOR 1049 & 1423	1129	ROTATING HOOK ASSEMBLY	1239	SCREW FOR 1162	1490	RUBBER CAP FOR 1055
1051	PRESSER BAR LIFTER	1130	SCREW FOR 1162	1240	SCREW FOR 1162	1491	RUBBER CAP FOR 1055
1053	SET SCREW FOR 1048	1131	SCREW FOR 1162	1241	SCREW FOR 1162	1492	RUBBER CAP FOR 1055
1054	NEEDLE BAR ONLY	1132	SCREW FOR 1162	1242	SCREW FOR 1162	1493	RUBBER CAP FOR 1055
1057	NEEDLE BAR LOWER BUSHING	1133	SCREW FOR 1162	1243	SCREW FOR 1162	1494	RUBBER CAP FOR 1055
1058	NEEDLE BAR LOWER BUSHING	1134	SCREW FOR 1162	1244	SCREW FOR 1162	1495	RUBBER CAP FOR 1055
1059	NEEDLE CLAMP COMPLETE	1135	SCREW FOR 1162	1245	SCREW FOR 1162	1496	RUBBER CAP FOR 1055
1060	NEEDLE CLAMP BODY	1136	SCREW FOR 1162	1246	SCREW FOR 1162	1497	RUBBER CAP FOR 1055
1061	THREAD GUIDE FOR 1060	1137	SCREW FOR 1162	1247	SCREW FOR 1162	1498	RUBBER CAP FOR 1055
1062	SCREW FOR 1061	1138	SCREW FOR 1162	1248	SCREW FOR 1162	1499	RUBBER CAP FOR 1055
1064	NEEDLE	1139	SCREW FOR 1162	1249	SCREW FOR 1162	1500	RUBBER CAP FOR 1055
1067A	E OIL WICK	1140	SCREW FOR 1162	1250	SCREW FOR 1162	1501	RUBBER CAP FOR 1055
1069	TAKE UP LEVER BODY	1141	SCREW FOR 1162	1251	SCREW FOR 1162	1502	RUBBER CAP FOR 1055
1070	TAKE UP LEVER LINK	1142	SCREW FOR 1162	1252	SCREW FOR 1162	1503	RUBBER CAP FOR 1055
1072	SET SCREW FOR 1070	1143	SCREW FOR 1162	1253	SCREW FOR 1162	1504	RUBBER CAP FOR 1055
1073	NEEDLE BAR CRANK	1144	SCREW FOR 1162	1254	SCREW FOR 1162	1505	RUBBER CAP FOR 1055
1076	NEEDLE BAR CRANK CONNECTION	1145	SCREW FOR 1162	1255	SCREW FOR 1162	1506	RUBBER CAP FOR 1055
1077	NEEDLE BAR CRANK CONNECTION	1146	SCREW FOR 1162	1256	SCREW FOR 1162	1507	RUBBER CAP FOR 1055
1078	CLAMP SCREW FOR 1077	1147	SCREW FOR 1162	1257	SCREW FOR 1162	1508	RUBBER CAP FOR 1055
1083	GUIDE TUBE FOR 1077	1148	SCREW FOR 1162	1258	SCREW FOR 1162	1509	RUBBER CAP FOR 1055
1085	PRESSER BAR LIFTER LEVER	1149	SCREW FOR 1162	1259	SCREW FOR 1162	1510	RUBBER CAP FOR 1055
1090	HINGER SCREW FOR 1085	1150	SCREW FOR 1162	1260	SCREW FOR 1162	1511	RUBBER CAP FOR 1055
1091	LOCK NUT FOR 1085	1151	SCREW FOR 1162	1261	SCREW FOR 1162	1512	RUBBER CAP FOR 1055
1093	HINGE SCREW FOR 1431	1152	SCREW FOR 1162	1262	SCREW FOR 1162	1513	RUBBER CAP FOR 1055
1094	SPRING FOR 1431	1153	SCREW FOR 1162	1263	SCREW FOR 1162	1514	RUBBER CAP FOR 1055
1096	LINK SCREW FOR 1085	1154	SCREW FOR 1162	1264	SCREW FOR 1162	1515	RUBBER CAP FOR 1055
1098	KNEE LIFTER FULL ROD	1155	SCREW FOR 1162	1265	SCREW FOR 1162	1516	RUBBER CAP FOR 1055
1099	NUT FOR 1097	1156	SCREW FOR 1162	1266	SCREW FOR 1162	1517	RUBBER CAP FOR 1055
1101	FELT WASHER FOR 1097	1157	SCREW FOR 1162	1267	SCREW FOR 1162	1518	RUBBER CAP FOR 1055
		1158	SCREW FOR 1162	1268	SCREW FOR 1162	1519	RUBBER CAP FOR 1055
		1159	SCREW FOR 1162	1269	SCREW FOR 1162	1520	RUBBER CAP FOR 1055
		1160	SCREW FOR 1162	1270	SCREW FOR 1162	1521	RUBBER CAP FOR 1055
		1161	SCREW FOR 1162	1271	SCREW FOR 1162	1522	RUBBER CAP FOR 1055
		1162	SCREW FOR 1162	1272	SCREW FOR 1162	1523	RUBBER CAP FOR 1055
		1163	SCREW FOR 1162	1273	SCREW FOR 1162	1524	RUBBER CAP FOR 1055
		1164	SCREW FOR 1162	1274	SCREW FOR 1162	1525	RUBBER CAP FOR 1055
		1165	SCREW FOR 1162	1275	SCREW FOR 1162	1526	RUBBER CAP FOR 1055
		1166	SCREW FOR 1162	1276	SCREW FOR 1162	1527	RUBBER CAP FOR 1055
		1167	SCREW FOR 1162	1277	SCREW FOR 1162	1528	RUBBER CAP FOR 1055
		1168	SCREW FOR 1162	1278	SCREW FOR 1162	1529	RUBBER CAP FOR 1055
		1169	SCREW FOR 1162	1279	SCREW FOR 1162	1530	RUBBER CAP FOR 1055
		1170	SCREW FOR 1162	1280	SCREW FOR 1162	1531	RUBBER CAP FOR 1055
		1171	SCREW FOR 1162	1281	SCREW FOR 1162	1532	RUBBER CAP FOR 1055
		1172	SCREW FOR 1162	1282	SCREW FOR 1162	1533	RUBBER CAP FOR 1055
		1173	SCREW FOR 1162	1283	SCREW FOR 1162	1534	RUBBER CAP FOR 1055
		1174	SCREW FOR 1162	1284	SCREW FOR 1162	1535	RUBBER CAP FOR 1055
		1175	SCREW FOR 1162	1285	SCREW FOR 1162	1536	RUBBER CAP FOR 1055
		1176	SCREW FOR 1162	1286	SCREW FOR 1162	1537	RUBBER CAP FOR 1055
		1177	SCREW FOR 1162	1287	SCREW FOR 1162	1538	RUBBER CAP FOR 1055
		1178	SCREW FOR 1162	1288	SCREW FOR 1162	1539	RUBBER CAP FOR 1055
		1179	SCREW FOR 1162	1289	SCREW FOR 1162	1540	RUBBER CAP FOR 1055
		1180	SCREW FOR 1162	1290	SCREW FOR 1162	1541	RUBBER CAP FOR 1055
		1181	SCREW FOR 1162	1291	SCREW FOR 1162	1542	RUBBER CAP FOR 1055
		1182	SCREW FOR 1162	1292	SCREW FOR 1162	1543	RUBBER CAP FOR 1055
		1183	SCREW FOR 1162	1293	SCREW FOR 1162	1544	RUBBER CAP FOR 1055
		1184	SCREW FOR 1162	1294	SCREW FOR 1162	1545	RUBBER CAP FOR 1055
		1185	SCREW FOR 1162	1295	SCREW FOR 1162	1546	RUBBER CAP FOR 1055
		1186	SCREW FOR 1162	1296	SCREW FOR 1162	1547	RUBBER CAP FOR 1055
		1187	SCREW FOR 1162	1297	SCREW FOR 1162	1548	RUBBER CAP FOR 1055
		1188	SCREW FOR 1162	1298	SCREW FOR 1162	1549	RUBBER CAP FOR 1055
		1189	SCREW FOR 1162	1299	SCREW FOR 1162	1550	RUBBER CAP FOR 1055
		1190	SCREW FOR 1162	1300	SCREW FOR 1162	1551	RUBBER CAP FOR 1055
		1191	SCREW FOR 1162	1301	SCREW FOR 1162	1552	RUBBER CAP FOR 1055
		1192	SCREW FOR 1162	1302	SCREW FOR 1162	1553	RUBBER CAP FOR 1055
		1193	SCREW FOR 1162	1303	SCREW FOR 1162	1554	RUBBER CAP FOR 1055
		1194	SCREW FOR 1162	1304	SCREW FOR 1162	1555	RUBBER CAP FOR 1055
		1195	SCREW FOR 1162	1305	SCREW FOR 1162	1556	RUBBER CAP FOR 1055
		1196	SCREW FOR 1162	1306	SCREW FOR 1162	1557	RUBBER CAP FOR 1055
		1197	SCREW FOR 1162	1307	SCREW FOR 1162	1558	RUBBER CAP FOR 1055
		1198	SCREW FOR 1162	1308	SCREW FOR 1162	1559	RUBBER CAP FOR 1055
		1199	SCREW FOR 1162	1309	SCREW FOR 1162	1560	RUBBER CAP FOR 1055
		1200	SCREW FOR 1162	1310	SCREW FOR 1162	1561	RUBBER CAP FOR 1055
		1201	SCREW FOR 1162	1311	SCREW FOR 1162	1562	RUBBER CAP FOR 1055
		1202	SCREW FOR 1162	1312	SCREW FOR 1162	1563	RUBBER CAP FOR 1055
		1203	SCREW FOR 1162	1313	SCREW FOR 1162	1564	RUBBER CAP FOR 1055
		1204	SCREW FOR 1162	1314	SCREW FOR 1162	1565	RUBBER CAP FOR 1055
		1205	SCREW FOR 1162	1315	SCREW FOR 1162	1566	RUBBER CAP FOR 1055
		1206	SCREW FOR 1162	1316	SCREW FOR 1162	1567	RUBBER CAP FOR 1055
		1207	SCREW FOR 1162	1317	SCREW FOR 1162	1568	RUBBER CAP FOR 1055
		1208	SCREW FOR 1162	1318	SCREW FOR 1162	1569	RUBBER CAP FOR 1055
		1209	SCREW FOR 1162	1319	SCREW FOR 1162	1570	RUBBER CAP FOR 1055
		1210	SCREW FOR 1162	1320	SCREW FOR 1162	1571	RUBBER CAP FOR 1055
		1212	SCREW FOR 1162	1321	SCREW FOR 1162	1572	RUBBER CAP FOR 1055
				1322	SCREW FOR 1162	1573	RUBBER CAP FOR 1055
				1323	SCREW FOR 1162	1574	RUBBER CAP FOR 1055
				1324	SCREW FOR 1162	1575	RUBBER CAP FOR 1055
				1325	SCREW FOR 1162	1576	RUBBER CAP FOR 1055
				1326	SCREW FOR 1162	1577	RUBBER CAP FOR 1055
				1327	SCREW FOR 1162	1578	RUBBER CAP FOR 1055
				1328	SCREW FOR 1162	1579	RUBBER CAP FOR 1055
				1329	SCREW FOR 1162	1580	RUBBER CAP FOR 1055
				1330	SCREW FOR 1162	1581	RUBBER CAP FOR 1055
				1331	SCREW FOR 1162	1582	RUBBER CAP FOR 1055
				1332	SCREW FOR 1162	1583	RUBBER CAP FOR 1055
				1333	SCREW FOR 1162	1584	RUBBER CAP FOR 1055
				1334	SCREW FOR 1162	1585	RUBBER CAP FOR 1055
				1335	SCREW FOR 1162	1586	RUBBER CAP FOR 1055
				1336	SCREW FOR 1162	1587	RUBBER CAP FOR 1055
				1337	SCREW FOR 1162	1588	RUBBER CAP FOR 1055
				1338	SCREW FOR 1162	1589	RUBBER CAP FOR 1055
				1339	SCREW FOR 1162	1590	RUBBER CAP FOR 1055
				1340	SCREW FOR 1162	1591	RUBBER CAP FOR 1055
				1341	SCREW FOR 1162	1592	RUBBER CAP FOR 1055
				1342	SCREW FOR 1162	1593	RUBBER CAP FOR 1055
				1343	SCREW FOR 1162	1594	RUBBER CAP FOR 1055</

**Consolidated Sewing
Machine Corp.
Website: www.consew.com**

MAIN office
131 W. 25th Street
New York, NY 10001
Tel: 212-741-7788
Fax: 212-741-7787
e-mail: consew@aol.net

Miami, FL
4013 N.W. 79th Avenue
Miami, FL 33166
Tel: 305-471-0200
Fax: 305-471-0243
e-mail: miamisales@consew.com

Los Angeles, CA
2320 South Hill Street
Los Angeles, CA 90007
Tel: 213-745-8844
Fax: 213-745-8855
e-mail: lasales@consew.com